

DRAWER WARMER

HDW & HDW-B Series

Installation & Operating Manual

I&W #07.05.014.00

CONTENTS

Important Owner Information	i
Introduction	
Important Safety Instructions	
Model Descriptions	
All Models	
HDW	1
HDW-N	1
HDW-B	1
HDW-BN	1
Specifications	2
Electrical Rating Chart - HDW	
Electrical Rating Chart - HDW-N	
Electrical Rating Chart - HDW-B	
Electrical Rating Chart - HDW-BN	
Dimensions - HDW & HDW-N	

Dimensions - HDW-B & HDW-BN4
Plug Configurations5
Installation
HDW & HDW-N5
HDW-B & HDW-BN5
Location6
Operation7
All Models7
Food Holding Capacity7
Food Holding Guide7
Maintenance
Accessories
Hatco Limited Warranty9
Authorized Parts DistributorsBack Cover

IMPORTANT OWNER INFORMATION

Record the model number, serial number (located on the Busilback of HDW models, inside left panel on HDW-B models), voltage and purchase date of your Drawer Warmer in the spaces below. Please have this information available when calling Hatco for service assistance. Model No._____

Serial No.		

Voltage _____

Date of Purchase ____

Business Hours: 8:00 a.m. to 5:00 p.m.

Central Standard Time

(Summer Hours: June to September -

8:00 a.m. to 5:00 p.m. C.D.T.

Monday through Thursday

8:00 a.m. to 3:30 p.m. C.D.T. Friday)

Telephone: (800) 558-0607; (414) 671-6350

Parts & Service Fax: (800) 690-2966 (414) 671-3976 (International)

INTRODUCTION

Hatco Drawer Warmers are designed to keep all foods at optimum serving temperatures without affecting quality. HDW models include an attached cord and plug set while the HDW-B models have a flexible conduit for built-in installation.

All Hatco Drawer Warmers are built for tough kitchen duty with rugged stainless steel construction, heavy-duty hardware, stainless steel slides and positive-closing drawers. They keep everything from meat to vegetables to rolls hot and flavor-fresh until served.

Each drawer features individual controls so you can hold a wider variety of hot foods during peak serving periods. This manual provides the installation, safety and operating instructions for the Heated Drawer Warmer. We recommend all installation, operating and safety instructions appearing in this manual be read prior to installation or operation of your Hatco Drawer Warmer. Safety instructions that appear in this manual after a warning symbol <u>i</u> and the words **WARNING** or **CAUTION** printed in bold face are important. Warning means there is the possibility of personal injury to yourself or others. Caution means there is the possibility of damage to the unit.

Your Hatco Drawer Warmer is a product of extensive research and field testing. The materials used were selected for maximum durability, attractive appearance and optimum performance. Every unit is thoroughly inspected and tested prior to shipment.

MARNINGS/CAUTIONS

Read the following important safety instructions to avoid personal injury and/or damage to the equipment.

- 1. To avoid any injury, turn the power switch off and allow to cool before performing any maintenance. On freestanding units, unplug the electrical cord from the power source as well.
- 2. Some exterior and interior surfaces on the unit will get hot. Use caution when touching these areas to avoid injury.
- 3. To avoid any injury, use caution when opening drawer. Heated/moisturized air escapes when drawer is open.
- 4. On free-standing units, plug unit into an electrical outlet of the correct voltage, size and plug configu-

ration. If the plug and receptacle do not match, contact a qualified electrician to determine the proper voltage and size and install the proper electrical outlet. On built-in units, final connections should be made by a qualified electrician.

- 5. For safe and proper operation, the unit must be located a reasonable distance from combustible walls and materials. If safe distances are not maintained, discoloration or combustion could occur.
- 6. Locate the unit in an area that is convenient for use. The location should be level to prevent the unit or its contents from accidentally falling, and strong enough to support the weight of the unit and food.
- 7. Abrasive cleaners could scratch the finish of your unit.

MODEL DESCRIPTION

ALL MODELS

The Hatco Drawer Warmers are built of rugged stainless steel with durable nylon rollers, 12 gauge stainless steel slides and heavy-duty hardware. Each drawer features adjustable sliding vents for humidity control in addition to a recessed on-off switch, thermostat and temperature monitor. Standard size pans 6" (15 cm) deep are supplied with each drawer. The insulated top and sides provide maximum energy efficiency and the heating elements are warranted for two years.

HDW MODELS

One, two and three drawer freestanding units are equipped with 4" (10cm) legs as standard equipment. Four drawer freestanding units are equipped with 6" (15 cm) stainless steel legs.

HDW-N MODELS

These heated Drawer Warmers have all the features of the HDW freestanding models but have a narrower profile for smaller space requirements. These units are available in 1, 2 and 3 drawer models.

HDW-B MODELS

These heated Drawer Warmers come equipped with a flexible conduit for built-in applications. These units are available in 1, 2 and 3 drawer models.

HDW-BN MODELS

These heated Drawer Warmers include all the features

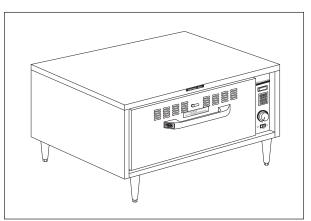


Figure 1. Model HDW-1

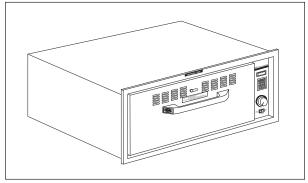


Figure 2. Model HDW-1B

of the HDW-B models but have a narrower profile for smaller space requirements. These units are available in 1, 2 and 3 drawer models.

	ELECTRICAL RATING CHART - HDW MODELS						
Model	Voltage	Watts	Amps	Plug Configuration	Shipping Weight		
	120	450	3.8	NEMA 5-15P	97 lbs. (44 kg)		
	208	450	2.2	NEMA 6-15P	97 lbs. (44 kg)		
HDW-1	240	450	1.9	NEMA 6-15P	97 lbs. (44 kg)		
	220	450	2.1	CEE 7/7 Schuko	97 lbs. (44 kg)		
	240	450	1.9	BS-1363	97 lbs. (44 kg)		
	120	900	7.5	NEMA 5-15P	168 lbs. (76 kg)		
	208	900	4.3	NEMA 6-15P	168 lbs. (76 kg)		
HDW-2	240	900	3.8	NEMA 6-15P	168 lbs. (76 kg)		
	220	900	4.1	CEE 7/7 Schuko	168 lbs. (76 kg)		
	240	900	3.8	BS-1363	168 lbs. (76 kg)		
	120	1350	11.3	NEMA 5-15P	232 lbs. (106 kg)		
	208	1350	6.5	NEMA 6-15P	232 lbs. (106 kg)		
HDW-3	240	1350	5.6	NEMA 6-15P	232 lbs. (106 kg)		
	220	1350	6.1	CEE 7/7 Schuko	232 lbs. (106 kg)		
	240	1350	5.6	BS-1363	232 lbs. (106 kg)		
	120	1800	15.0	NEMA 5-20P	296 lbs. (135 kg)		
	208	1800	8.7	NEMA 6-15P	296 lbs. (135 kg)		
HDW-4	240	1800	7.5	NEMA 6-15P	296 lbs. (135 kg)		
	220	1800	8.2	CEE 7/7 Schuko	296 lbs. (135 kg)		
	240	1800	7.5	BS-1363	296 lbs. (135 kg)		

ELECTRICAL RATING CHART - HDW MODELS

ELECTRICAL RATING CHART - HDW-N MODELS

Model	Voltage	Watts	Amps	Plug Configuration	Shipping Weight
	120	450	3.8	NEMA 5-15P	97 lbs. (44 kg)
	208	450	2.2	NEMA 6-15P	97 lbs. (44 kg)
HDW-1N	240	450	1.9	NEMA 6-15P	97 lbs. (44 kg)
	220	450	2.1	CEE 7/7 Schuko	97 lbs. (44 kg)
	240	450	1.9	BS-1363	97 lbs. (44 kg)
	120	900	7.5	NEMA 5-15P	168 lbs.(76 kg)
	208	900	4.3	NEMA 6-15P	168 lbs.(76 kg)
HDW-2N	240	900	3.8	NEMA 6-15P	168 lbs.(76 kg)
	220	900	4.1	CEE 7/7 Schuko	168 lbs. (76 kg)
	240	900	3.8	BS-1363	168 lbs. (76 kg)
	120	1350	11.3	NEMA 5-15P	232 lbs. (105 kg)
	208	1350	6.5	NEMA 6-15P	232 lbs. (105 kg)
HDW-3N	240	1350	5.6	NEMA 6-15P	232 lbs. (105 kg)
	220	1350	6.1	CEE 7/7 Schuko	232 lbs. (105 kg)
	240	1350	5.6	BS-1363	232 lbs. (105 kg)

The electrical information in the shaded areas pertains to **Export models only**.

ELECTRICAL RATING CHART - HDW-B MODELS						
Model	Voltage	Watts	Amps	Wiring	Shipping Weight	
	120	450	3.8	Conduit	88 lbs. (40 kg)	
	208	450	2.2	Conduit	88 lbs. (40 kg)	
HDW-1B	240	450	1.9	Conduit	88 lbs. (40 kg)	
	220	450	2.1	Conduit	88 lbs. (40 kg)	
	240	450	1.9	Conduit	88 lbs. (40 kg)	
	120	900	7.5	Conduit	159 lbs. (72 kg)	
	208	900	4.3	Conduit	159 lbs. (72 kg)	
HDW-2B	240	900	3.8	Conduit	159 lbs. (72 kg)	
	220	900	4.1	Conduit	159 lbs. (72 kg)	
	240	900	3.8	Conduit	159 lbs. (72 kg)	
	120	1350	11.3	Conduit	223 lbs. (101 kg)	
	208	1350	6.5	Conduit	223 lbs. (101 kg)	
HDW-3B	240	1350	5.6	Conduit	223 lbs. (101 kg)	
	220	1350	6.1	Conduit	223 lbs. (101 kg)	
	240	1350	5.6	Conduit	223 lbs. (101 kg)	

EI ECTDICAT **DATING CHADT HDW_R MODELS**

ELECTRICAL RATING CHART - HDW-BN MODELS

Model	Voltage	Watts	Amps	Wiring	Shipping Weight
	120	450	3.8	Conduit	88 lbs. (40 kg)
	208	450	2.2	Conduit	88 lbs. (40 kg)
HDW-1BN	240	450	1.9	Conduit	88 lbs. (40 kg)
	220	450	2.1	Conduit	88 lbs. (40 kg)
	240	450	1.9	Conduit	88 lbs. (40 kg)
	120	900	7.5	Conduit	159 lbs. (72 kg)
	208	900	4.3	Conduit	159 lbs. (72 kg)
HDW-2BN	240	900	3.8	Conduit	159 lbs. (72 kg)
	220	900	4.1	Conduit	159 lbs. (72 kg)
	240	900	3.8	Conduit	159 lbs. (72 kg)
	120	1350	11.3	Conduit	223 lbs. (101 kg)
	208	1350	6.5	Conduit	223 lbs. (101 kg)
HDW-3BN	240	1350	5.6	Conduit	223 lbs. (101 kg)
	220	1350	6.1	Conduit	223 lbs. (101 kg)
	240	1350	5.6	Conduit	223 lbs. (101 kg)

The electrical information in the shaded areas pertains to **Export models only**.

Model	(A) Depth	(B) Width	(C) Height
HDW-1	22-5/8"	29-1/4"	11"
	(58 cm)	(74 cm)	(28 cm)
HDW-2	22-5/8"	29-1/4"	21-1/8"
	(58 cm)	(74 cm)	(54 cm)
HDW-3	22-5/8"	29-1/4"	31-1/4"
	(58 cm)	(74 cm)	(79 cm)
HDW-4	22-5/8"	29-1/4"	41-3/8"
	(58 cm)	(74 cm)	(105 cm)
HDW-1N	27"	20-3/16"	11"
	(69 cm)	(53 cm)	(28 cm)
HDW-2N	27"	20-3/16"	21-1/8"
	(69 cm)	(53 cm)	(54 cm)
HDW-3N	27"	20-3/16"	31-1/4"
	(69 cm)	(53 cm)	(79 cm)

DIMENSIONS - HDW & HDW-N

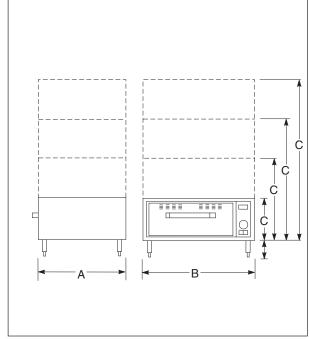


Figure 3. Dimensions - HDW & HDW-N Models

DIMENSIONS - HDW-B & HDW-BN

Model	(A) Depth	(B) Width	(C) Height
HDW-1B	22-5/16"	28-5/16"	9-3/4"
	(57 cm)	(72 cm)	(25 cm)
HDW-2B	22-5/16"	28-5/16"	19-15/16"
	(57 cm)	(72 cm)	(51 cm)
HDW-3B	22-5/16"	28-5/16"	30-1/16"
	(57 cm)	(72 cm)	(76 cm)
HDW-1BN	26-3/4"	20-9/16"	9-3/4"
	(68 cm)	(52 cm)	(25 cm)
HDW-2BN	26-3/4"	20-9/16"	19-15/16"
	(68 cm)	(52 cm)	(51 cm)
HDW-3BN	26-3/4"	20-9/16"	30-1/16"
	(68 cm)	(52 cm)	(76 cm)

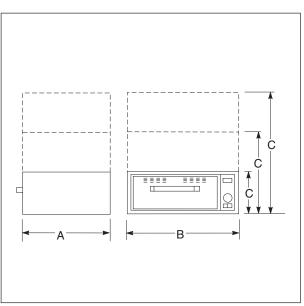


Figure 4. Dimensions - HDW-B & HDW-BN Models

PLUG CONFIGURATIONS

Free-standing units are supplied from the factory with an electrical cord and plug installed. Plugs are supplied according to the applications as shown in Figure 5.

Built-in units are supplied with a flexible conduit and applicable wiring.

CAUTION

On free-standing units, plug unit into an electrical outlet of the correct voltage, size and plug configuration. If the plug and receptacle do not match, contact a qualified electrician to determine the proper voltage and size and install the proper electrical outlet.

On built-in units, final connections should be made by a qualified electrician.

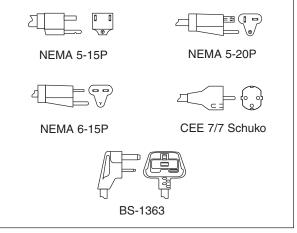


Figure 5. Plug Configuration

HDW & HDW-N MODELS

Care should be taken when unpacking shipping carton to avoid damage to unit and components enclosed.

- 1. Remove the unit from the carton.
- 2. Remove plastic bag containing four adjustable legs from inside the drawer.

Legs must be installed prior to operation of the unit.

 Carefully lay unit on its side (requires 2 people). Install legs to bottom of unit as shown in Figure 6. Hand tighten legs until snug. Do not overtighten.

Do not lay unit on the front or back side or damage to unit could occur.

- 4. Return unit to the upright position.
- 5. Remove all tape from the unit.

NOTE: Legs are adjustable for leveling the unit. Use a 9/16" (14 mm) open-end wrench to make leveling adjustments once the unit is placed in final position.

HDW-B & HDW-BN MODELS

Care should be taken when unpacking shipping carton to avoid damage to unit and components enclosed.

1. Remove the unit from the carton.

INSTALLATION

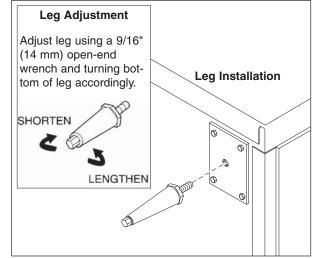


Figure 6. Adjustable Legs

ACAUTION

Do not lay unit on the front or back side or damage to the unit could occur.

- 2. Read information under *Location* before determining installation site.
- 3. Determine the cabinet size opening using the chart in Figure 7.

NOTE: Maintain a minimum clearance of 1" (2.5 cm) between the cutout opening and the floor.

4. After cabinet opening is prepared to the proper size,

Printed March 1999

INSTALLATION

lodel	(D) Depth Dimension	(W) Width Dimension	(H) Height Dimension	
IDW-1B	23-3/4" (60 cm)	28-5/16" (72 cm)	10-1/8" (26 cm)	Section A-A
HDW-2B	23-3/4" (60 cm)	28-5/16" (72 cm)	20-1/4" (51 cm)	$\begin{array}{c c} & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & & \\ & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & \\ & & & & & & \\ & & & & & & & \\ & & & &$
HDW-3B	23-3/4" (60 cm)	28-5/16" (72 cm)	30-3/8" (77 cm)	H Lock Strip
HDW-1BN	28-1/8" (71 cm)	19-5/8" (50 cm)	10-1/8" (26 cm)	.125" .875" A
HDW-2BN	28-1/8" (71 cm)	19-5/8" (50 cm)	20-1/4" (51 cm)	(.5 cm) (2 cm) Drawer Bezel Outline
HDW-3BN	28-1/8" (71 cm)	19-5/8" (50 cm)	30-3/8" (77 cm)	

Figure 7. Built-In Cutout Dimensions

a lock strip (not supplied by Hatco) must be permanently fastened to the lower front inside lip of the cabinet opening. See Figure 7.

5. Partially insert the Drawer Warmer into the opening, making sure the flexible conduit is fed into the wire connection area first. Have a qualified electrician connect the wires at this time.

WARNING

Final electrical connections must be made by a qualified electrician.

- 6. Before completely installing the unit into the opening, apply a bead of NSF approved sealant between the Drawer Warmer flange and the cabinet facing.
- 7. Slide the unit completely into the opening until front locking studs drop behind locking strip and lock into place. To verify installation, pull bottom drawer fully out and gently pull to ensure unit is securely locked in place.

LOCATION

WARNING

Locate the unit in an area that is convenient for use. The location should be level to prevent the unit or its contents from accidentally falling, and strong enough to support the weight of the unit and its contents.

ACAUTION

For safe and proper operation, the unit must be located a reasonable distance from combustible walls and materials. If safe distances are not maintained, discoloration or combustion could occur.

OPERATION

ALL MODELS

WARNING

Some exterior and interior surfaces on the unit will get hot. Use caution when touching these areas to avoid injury.

- 1. On freestanding models, plug unit into an electrical outlet of the correct voltage, size and plug configuration. See *Specifications* for details.
- 2. Turn the Power Switch to the ON position. See Figure 8.
- 3. Turn the Thermostat Control to the desired temperature settings. See the *Recommended Settings* chart on the control panel or the *Food Holding Guide* in this manual.
- 4. Allow unit 15-20 minutes to reach operating temperature.
- Adjust the drawer vents for desired humidity control by sliding the locking knob on the drawer front. See Figure 9. Opening the vents all the way allows maximum moisture to escape.

WARNING

To avoid injury, use caution when opening drawer. Heated/moisturized air escapes when drawer is opened.

NOTE: Proper vent adjustment depends on the type and amount of food held, as well as the frequency of drawer opening.

NOTE: For additional moisture, water can be added (approximately 1/4" (.6 cm) of water) to the optional water/spillage pan before inserting the food pan into the drawer. Check water level periodically. Add water as necessary. Use of splash baffle is recommended to prevent water from splashing into the cabinet interior when opening and closing a drawer.

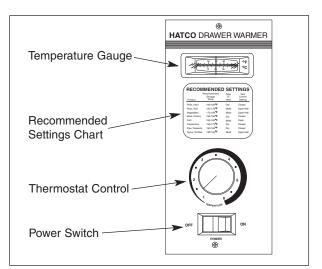


Figure 8. Operating Controls

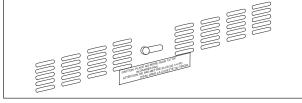


Figure 9. Drawer Vents

NOTE: Use of softened or distilled water is recommended to preserve the life of electrical and mechanical components. If hard water is used, the pan will require periodic cleaning and deliming. See Maintenance section for deliming instructions.

FOOD HOLDING CAPACITY

A standard drawer has the following capacity:

Dinner Rolls:	6-8 dozen		
Ribs:	25-30 lbs. (11-14 kg)		
Potatoes:	3-3-1/2 dozen		

PRODUCT	RECOMMENDED STORAGE TEMPERATURE	TYPE OF HEAT	VENT CONTROL
Rolls, Hard	160° - 185° F (71° - 85° C)	Dry	Closed
Rolls, Soft	150° - 175° F (66° - 79° C)	Moist	Open-Half
Vegetables	175° - 185° F (66° - 85° C)	Moist	Open-Half
Meat, Poultry	165° - 185° F (74° - 85° C)	Dry	Closed
Fish	165° - 185° F (74° - 85° C)	Moist	Open
Casseroles	150° - 175° F (66° - 79° C)	Dry	Closed
Pies, Desserts	160° - 185° F (71° - 85° C)	Dry	Closed
Tacos, Tortillas	150° - 160° F (66° - 71° C)	Moist	Open-Half

FOOD HOLDING GUIDE

Printed March 1999

Form No. HDWM-0399

MAINTENANCE

CLEANING

Hatco Drawer Warmers are designed for maximum durability and performance, with minimum maintenance.

WARNING To avoid any injury, turn the power switch off and allow unit to cool before performing maintenance. On freestanding units, unplug the electrical cord from the power source as well.

To preserve the finish of the Drawer Warmer, it is recommended that the surfaces be wiped daily with a damp cloth. Food pans should be removed and washed. Stubborn stains may be removed with a good non-abrasive cleaner. Hard to reach areas should be cleaned with a small brush and mild soap.

ACAUTION

Abrasive cleaners could scratch the finish of your Drawer Warmer.

REMOVING LIME & MINERAL DEPOSITS (Models with optional water pan)

NOTE: If the water has an excessive amount of lime or mineral content, use the following instructions for periodic cleaning and de-liming of the water pan.

1. Turn the power switch off. On freestanding units, unplug the cord from the power source.

- 2. After the unit has cooled down, remove the water pan.
- 3. Fill the water pan with a mixture of water and delimer.

NOTE: The delimer used should be a safe, non-toxic, non-corrosive solution. Follow the delimer's instructions for proper mixture of water and de-limer solution.

- 4. Allow the pan to stand with the mixture for the recommended period of time. (The time required will vary depending on the solution used and amount of deposits in the pan.)
- 5. After the deliming period, drain the solution from the pan.
- 6. Continue to fill and rinse the pan with water only, until the pan is clean.
- 7. Install the pan into the unit. On freestanding units, plug the power cord into the receptacle and fill the pan as usual for daily operation (1/4" (.6 cm) of water is recommended).

NOTE: The lime and mineral content of the water used for daily operation will determine how often de-liming procedure must be performed.

ACCESSORIES

WATER/SPILLAGE PAN

The water/spillage pan fits in the drawer underneath the food pan and can be used to humidify the heating area or keep spillage from the cabinet interior. Splash baffle is recommended.

SPLASH BAFFLE

The splash baffle is used with the optional water/ spillage pan. Fabricated of stainless steel, the baffle fits into the bottom of the water/spillage pan, over the water bath, to prevent water from splashing into the cabinet interior when opening and closing a drawer, while allowing humidity to escape.

FOOD PANS

Food pans 12"W x 20"L (31 x 51 cm) are available in depth sizes of 2", 4" & 6" (5, 10 & 15 cm).

CHIP GUARD

The chip guard completely shields the heating element, preventing any food product, such as tortilla chips, from coming in contact with the heating element.

ADJUSTABLE LEGS - 6" (15 CM)

6" (15 cm) stainless steel adjustable legs are available for one, two and three drawer freestanding units.

LOCKING CASTERS - 2" (6 cm) Diameter

These locking casters are available for the freestanding HDW-1, HDW-2 and HDW-3 models. The casters add 4-1/4" (10 cm) to the height of the Drawer Warmer.

LOCKING CASTERS - 3" (8 cm) Diameter

These locking casters are available for the freestanding HDW-1, HDW-2 and HDW-3 models. The casters add 5-1/4" (13 cm) to the height of the Drawer Warmer.

LOCKING CASTERS - 4" (10 cm) Diameter

These locking casters are available for the freestanding HDW-1, HDW-2, HDW-3 and HDW-4 models. The casters add 6-1/4" (16 cm) to the height of the Drawer Warmer.

1. PRODUCT WARRANTY

Hatco warrants the products that it manufactures (the "Products") to be free from defects in materials and workmanship, under normal use and service, for a period of one (1) year from the date of purchase when installed and maintained in accordance with Hatco's written instructions. Buyer must establish the product's purchase date by returning Hatco's Warranty Registration Card or by other means satisfactory to Hatco in its sole discretion.

Hatco warrants the following Product components to be free from defects in materials and workmanship from the date of purchase (subject to the foregoing conditions) for the period(s) of time and on the conditions listed below:

 a) One (1) Year Parts and Labor PLUS One (1) Additional Year Parts-Only Warranty: Toaster Elements (metal sheathed) Drawer Warmer Elements (metal sheathed) Drawer Warmer Drawer Rollers and Slides Food Warmer Elements (metal sheathed) Display Warmer Elements (metal sheathed air heating) Holding Cabinet Elements (metal sheathed air

heating)

Cook and Hold Oven Elements (metal sheathed)

b) One (1) Year Parts and Labor PLUS Four (4) Additional Years Parts-Only Warranty on pro-rated terms that Hatco will explain at Buyer's Request:

Powermite Gas Booster Heater Tanks Mini Compact Tanks (stainless steel) 3CS and FR Tanks

- c) One (1) Year Parts and Labor PLUS Four (4) Additional Years Parts-Only Warranty PLUS Five (5) Year Parts-Only Warranty on prorated terms that Hatco will explain at Buyer's Request: Booster Heater Tanks (Castone)
- d) One (1) Year Parts-Only Warranty for components not installed by Hatco: Accessory Components (including but not limited to valves, gauges and remote switches)

THE FOREGOING WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR PATENT OR OTHER INTELLECTUAL PROPERTY RIGHT INFRINGEMENT. Without limiting the generality of the foregoing, SUCH WARRANTIES DO NOT COVER: Coated incandescent light bulbs, fluorescent light bulbs, lamp warmer heat bulbs, glass components or Product failure caused by liming or sediment buildup in tanks, Product misuse, tampering or misapplication, improper installation, application of improper voltage, or recalibration of thermostats or high limit switches.

2. LIMITATION OF REMEDIES AND DAMAGES

Hatco's liability and Buyer's exclusive remedy hereunder will be limited solely, at Hatco's option, to repair or replacement by a Hatco-authorized service agency (other than where Buyer is located outside of the United States or Canada, in which case Hatco's liability and Buyer's exclusive remedy hereunder will be limited solely to replacement of part under warranty) with respect to any claim made within the applicable warranty period referred to above. Without limiting the generality of the foregoing, all portable Products (as defined in N.S.F. 4-4.28.4) shall be delivered by Buyer, at its sole expense, to the nearest Hatco-authorized service agency for replacement or repair. Hatco reserves the right to accept or reject any such claim in whole or in part. Hatco will not accept the return of any Product without prior written approval from Hatco, and all such approved returns shall be made at Buyer's sole expense. HATCO WILL NOT BE LIABLE, UNDER ANY CIRCUMSTANCES, FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, INCLUDING BUT NOT LIMITED TO LABOR COSTS OR LOST PROFITS RESULTING FROM THE USE OF OR INABILITY TO USE THE PRODUCTS OR FROM THE PRODUCTS BEING INCORPORATED IN OR BECOMING A COMPONENT OF ANY OTHER PRODUCT OR GOODS.

HATCO AUTHORIZED PARTS DISTRIBUTORS

ALABAMA Jones McLeod Appl. Svc. Birmingham 205-251-0159 ARIZONA Auth. Comm. Food Equip. Phoenix 602-234-2443 Byassee Equipment Co. Phoenix 602-252-0402 CALIFORNIA Industrial Electric Huntington Beach 714-379-7100 Chapman Appl. Service San Diego 619-298-7106 P & D Appliance S. San Francisco 650-635-1900 COLORADO All City Service 303-454-9500 Denver Hawkins Commercial Appliance 303-781-5548 Englewood FLORIDA Whaley Foodservice Repair Jacksonville 904-725-7800 Nass Service Co., Inc. 407-425-2681 Orlando BGSL Pompano Beach 954-971-0456 Comm. Appliance Service 813-663-0313 Tampa GEORGIA Southeastern Rest. Svc. 770-446-6177 Norcross HAWAII Burney's Comm. Service, Inc. 808-848-1466 Honolulu Food Equip Parts & Service 808-847-4871 Honolulu ILLINOIS Benjamin & Sons 773-327-7128 Chicago Eichenauer Elec. Service Decatur 217-429-4229 Midwest Elec. Appl. Service 630-279-8000 Elmhurst Cone's Repair Service 309-797-5323 Moline INDIANA Comm. Parts & Service, Inc. Indianapolis 317-545-9655 IOWA Electric Motor Service Co. 319-323-1823 Davenport KENTUCKY Comm. Parts & Service, Inc. 502-367-1788 Louisville LOUISIANA Chandlers Parts & Service Baton Rouge 225-272-6620 Bana Comm. Parts, Inc. Shreveport 318-631-6550

MARYLAND Electric Motor Service Baltimore 410-467-8080 GCS Service, Inc. Silver Spring 301-585-7550 MASSACHUSETTS Ace Service Co., Inc. Needham 781-449-4220 MICHIGAN Commercial Kitchen Service Bay City 517-893-4561 **Bildons Appliance Service** 248-478-3320 Detroit Midwest Food Equip. Service Grandville 616-261-2000 MINNESOTA Metro Appliance Service 612-546-4221 Minneapolis MISSOURI GCS Service, Inc. Kansas City 816-920-5999 Kaemmerlen Parts & Service St. Louis 314-535-2222 NEBRASKA Anderson Electric 402-341-1414 Omaha NEVADA Burney's Commercial Las Vegas 702-736-0006 NEW JERSEY Jay Hill Repair Fairfield 973-575-9145 Service Plus Flanders 973-691-6300 NEW YORK Acme American Repairs, Inc. Brooklyn 718-456-6544 Alpro Service Co. Brooklyn 718-386-2515 Appliance Installation Buffalo 716-884-7425 Northern Parts Dist. Plattsburgh 518-563-3200 J. B. Brady, Inc. Syracuse 315-422-9271 NORTH CAROLINA Authorized Appliance Charlotte 704-377-4501 OHIO Akron/Canton Comm. Svc. Inc. Akron 330-753-6635 Certified Service Center 513-772-6600 Cincinnati Columbus Restaurant Service 614-476-3225 Columbus Electrical Appl. Repair Service Independence 216-459-8700 E. A. Wichman Co. 419-385-9121 Toledo

OKLAHOMA Hagar Rest. Service, Inc. Oklahoma City 405-235-2184 Krueger, Inc. Oklahoma City 405-528-8883 OREGON Bressie Electric Co. 503-231-7171 Portland Ron's Service. Inc. 503-624-0890 Portland PENNSYLVANIA Authorized Factory Service Coraopolis 412-262-2330 FAST Comm. Appl. Service 215-922-6245 Philadelphia GCS Service, Inc. Pittsburgh 412-787-1970 K & D Service Co. Harrisburg 717-236-9039 Elmer Schultz Services 215-627-5401 Philadelphia Electric Repair Co. 610-376-5444 Reading RHODE ISLAND Marshall Electric Co. 401-331-1163 Providence SOUTH CAROLINA Whaley Foodservice Repair W. Columbia 803-791-4420 TENNESSEE Camp Electric Memphis 901-527-7543 TEXAS City Kitchen Service Co. Austin 512-719-4445 Stove Parts Supply Fort Worth 817-831-0381 Armstrong Repair Service 713-666-7100 Houston Commercial Kitchen Repair Co. 210-735-2811 San Antonio San Antonio Rest. Equip. San Antonio 210-824-3271 UTAH Peterson's Commercial Parts & Svc. Salt Lake Citv 801-487-3653 VIRGINIA Daubers Norfolk 757-855-4097 Daubers Springfield 703-866-3600 WASHINGTON Restaurant Appl. Service Seattle 206-524-8200 WISCONSIN A.S.C., Inc. Madison 608-246-3160 A.S.C., Inc. 414-543-6460 Milwaukee

HATCO CORPORATION

P.O. Box 340500, Milwaukee, WI 53234-0500 U.S.A. (800) 558-0607 (414) 671-6350 Parts & Service Fax (800) 690-2966 Int'l. Fax (414) 671-3976 Web Site: www.hatcocorp.com