

MEIKO H500 DISHWASHER PROCEDURES

BEFORE SWITCHING ON THE MACHINE PLEASE ENSURE:

- PLUG AND ANY FILTRATION SIEVES ARE IN PLACE

OPERATION:

- PRESS THE POWER BUTTON (O) TO TURN ON THE MACHINE.
- THE AUTOMATIC FILLING PROCESS WILL START (THIS TAKES AROUND 20/25 MINUTES)
- LIGHT WILL FLASH WHILE FILLING
- LIGHT WILL STAY CONSTANT WHEN THE MACHINE IS READY FOR OPERATION
- LIFT THE HOOD AND LOAD MACHINE WITH FULL BASKET OF DISHES
- LOWER THE HOOD AND PRESS THE HANDLE OF THE MACHINE DOWNWARDS TO ACTIVATE THE MACHINE AND THE WASH CYCLE
- CYCLE WILL STOP WHEN LIGHT IS OUT, THEN PROCEED TO OPEN THE HOOD AND UNLOAD

SHUTTING DOWN THE APPLIANCE AND CLEANING:

- AT THE END OF SHIFT OR WHEN CHANGE OF WATER IS REQUIRED, PRESS THE OFF KEY (O)
- REMOVE THE PLUG
- PRESS THE START/DRAIN KEY AND THE MACHINE WILL DRAIN
- MACHINE WILL SPRAY HOT CLEAN WATER INTO THE WASH CHAMBER ONCE IT HAS DRAINED
- ONCE FINISHED THE LIGHT WILL GO OFF, OPEN DOOR, REMOVE ANY FOOD PARTICLES IF PRESENT, REMOVE AND CLEAN SIEVES AND WASH ARMS AT THE BOTTOM AND TOP OF MACHINE UNDER HOT RUNNING WATER (DO NOT USE FOAMING DETERGENT TO CLEAN, USE ONLY HOT WATER) AND WIPE OUT MACHINE IF REQUIRED WITH A HOT DAMP CLOTH.
- PUT SIEVE, WASH ARMS AND PLUG BACK IN PLACE READY FOR THE NEXT SHIFT.