

MERRYCHEF®

Accessories



Expand your menu

Discover our range of unique cooking **accessories**, including our new, simple to use panini press, designed specifically for your Merrychef high speed oven.



Expanding Your Opportunities

MERRYCHEF®



Our unique range of accessories for the Merrychef high speed oven have been designed for you to get greater flexibility out of your oven. The accessories can help you expand your menu by allowing you to cook a wider variety of meals. Placing food on liners and trays will help keep the ovens clear from food and grease, significantly reducing cleaning time.

All Merrychef accessories are certified food safe and approved for use in our ovens. They are either made from 100% PTFE or have been specifically coated in a material that reduces or eliminates oven arcing which may occur with unapproved metal accessories.

Our range of brightly coloured cooking trays not only look great, but also allow you to have specific colours for certain foods, i.e. green for vegetarian meals. Made from 100% PTFE, they are easy to wipe clean in-between programmes and are dishwasher compatible.

As the Merrychef range of ovens have different cavity sizes, we have some accessories that are specific to each oven. However, the NEW Signature range will suit most of our ovens and provide you with the broadest range of applications. They are highly durable, long-lasting and dishwasher compatible.

Carefully storing and regularly cleaning your accessories will significantly improve their useful life.

Contents

Merrychef eikon® , Merrychef conneX® range

p3	conneX® 16, Panini press
p 4-5	conneX® 12, conneX® 12e, Panini press, eikon® e1s, eikon® e2s
p 6-7	eikon® e4, eikon® e4s
p 8-9	eikon® e3, eikon® e5
p 10-11	Signature range The essential moulded accessories you should never be without. Ideal for cooking specific foods like poaching eggs, baking cakes and heating soups.
p 11	Cleaning accessories



To view the full range go to:

 
www.merrychef.com/products/accessories



Merrychef connex® 16



- ▷ **Flat cook plate**
H6 x W400 x D400 mm
Part no: **DF0035**

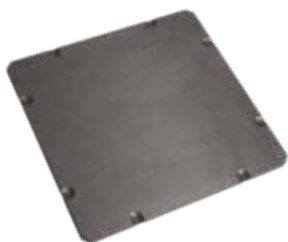

- ▷ **Griddled cook plate**
H6 x W400 x D400 mm
Part no: **DF0127**



- ▷ **Paddle with hand guard and sides**
W398 x D400 mm
Part no: **SF326**



- ▷ **Cool down pan**
1/2 size 100 mm deep
Part no: **32Z4028**



- ▷ **Non-stick cooking liner**
W386.1 x D386.1 mm
(Natural)
Part no: **32Z4178**
(Green)
Part no: **32Z4151**



- ▷ **Full size cooking tray**
H15 x W353 x D353 mm
(Black) Part no: **32Z4175**



 
- ▷ **Full size deep cooking tray**
H25 x W393 x D393 mm
(Black)
Part no: **32Z4152**
(Green)
Part no: **32Z4167**



- ▷ **Full size cooking mesh tray**
H19 x W353 x D353 mm
Part no: **32Z4176**



- ▷ **Half size deep cooking tray**
H25 x W195 x D391 mm
(Black)
Part no: **32Z4185**
(Green)
Part no: **32Z4179**

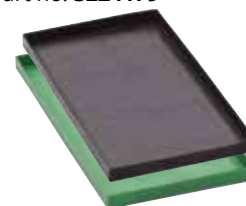

The range of different size trays for connex® 12 (p4 - 5) can be used with this oven – allowing you to cook multiple items at once. They are available in different colours to avoid cross contamination of food allowing you to quickly switch between food products.

Additional signature range accessories e.g. containers and moulds can be found on p10 - 11.

Merrychef panini press



Our new patented panini press, is easy to use and install for our connex® 16 oven delivering consistent, compressed food with perfect grill marks.

The paddle (included) slides food between a top grill plate and a bottom plate. When the paddle is removed the grill will lower to compress the food.

- ▷ **High opening panini press with grilled bottom plate**
W399.6 mm, Opening H83.6 mm, Closing H39.4 mm
Part no: **PSF188**

- ▷ **High opening panini press with flat bottom plate**
W399.6 mm, Opening H83.6 mm, Closing H39.4 mm
Part no: **PSF189**

- ▷ **Low opening panini press with flat bottom plate**
W399.6 mm, Opening H83.1 mm, Closing H14 mm
Part no: **PSF187**

These kits include:
x2 panini press liners, Panini press tray (low profile), Red brush, Scraper

- ▷ **Panini Press Tray (high profile)**
W290mm x D230mm x H17.8mm
Part no: **32Z4181**
Compatible with PSF188 & PSF189 ONLY



- ▷ **Panini Press Tray (low profile)**
W210.8mm x D276.9mm x H11.2mm
Part no: **32Z4203**
Compatible with PSF188, PSF189 & PSF187



- ▷ **Red brush (hard bristles)**
Part no: **32Z4189**



- ▷ **Scraper**
Part no: **32Z4191**

 


Merrychef conneX® 12, conneX® 12e, Merrychef eikon® e1s, eikon® e2s



▷ **Flat cook plate**
H6 x W300 x D300 mm
Part no: **DB0739**

Available for conneX 12 and eikon e2s.
Ovens purchased from January 2019.

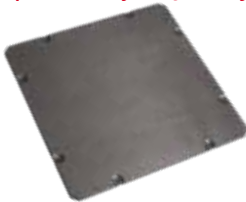

▷ **Griddled cook plate**
H6 x W300 x D300 mm
Part no: **DB0719**

Available for conneX 12 and eikon e2s.
Ovens purchased from January 2019.



▷ **Flat cook plate**
H4 x W304 x D304 mm
Part no: **DC0322**

Available for e1s and conneX 12e only.



▷ **Wire rack**
H6 x W304 x D304 mm
Part no: **DC0327**

Available for e1s and conneX 12e only.



▷ **Flat cook plate**
H42 x W308 x D306 mm
Part no: **PSB3108**

*Available for e2s only.
Ovens purchased before January 2019.*



▷ **Griddled cook plate**
H42 x W308 x D306 mm
Part no: **PSB3117**

*Available for e2s only.
Ovens purchased before January 2019.*



Merrychef panini press



Our new patented panini press, is easy to use and install for our conneX® 12 and eikon® e2s ovens delivering consistent, compressed food with perfect grill marks.

The paddle (included) slides food between a top grill plate and a bottom plate. When the paddle is removed the grill will lower to compress the food.

▷ **High opening panini press with gridded bottom plate**
W302.2mm. Opening H 79mm, Closing H 30mm.
Part no: **PSR163**

▷ **High opening panini press with flat bottom plate**
W302.2mm. Opening H 79mm, Closing H 30mm
Part no: **PSR162**

▷ **Low opening panini press with flat bottom plate**
W302.2mm. Opening H 70.5mm, Closing H 13.5mm
Part no: **PSR160**

▷ **Panini press liner**
W235mm x D292mm
Part no: **32Z4153**



▷ **Panini Press Tray (high profile)**
W290mm x D230mm x H17.8mm
Part no: **32Z4186**

Compatible with PSR163 & PSR162 ONLY



▷ **Panini Press Tray (low profile)**
W210.8mm x D276.9mm x H11.2mm
Part no: **32Z4198**

Compatible with PSR163, PSR162 & PSR 160



▷ **Red brush (hard bristles)**
Part no: **32Z4189**



▷ **Scraper**
Part no: **32Z4191**





 
- ▷ **Cool down pan**
1/4 size 65 mm deep
Part no: **32Z4079**




- ▷ **Paddle with hand guard and sides**
W298 x D300 mm
Part no: **SR318**




- ▷ **Non-stick cooking liner**
W285 x D285 mm
(Natural)
Part no: **32Z4088**
(Green)
Part no: **32Z4096**
(Purple)
Part no: **32Z4160**

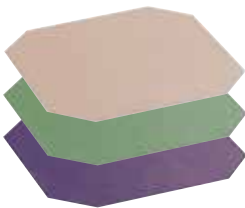

 
- ▷ **Full size cooking tray**
H13 x W279 x D279 mm
(Black)
Part no: **32Z4080**
(Red)
Part no: **32Z4100**
(Green)
Part no: **32Z4093**
(Blue)
Part no: **32Z4101**
(Purple)
Part no: **32Z4159**
(Beige)
Part no: **32Z4150**

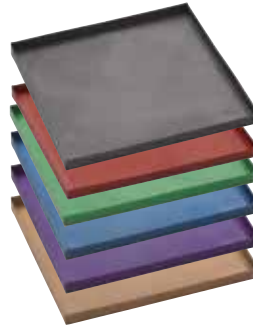

 
- ▷ **Full size cooking tray (thin based)**
H13 x W279 x D279 mm
(Grey)
Part no: **32Z4161**
(Purple)
Part no: **32Z4164**

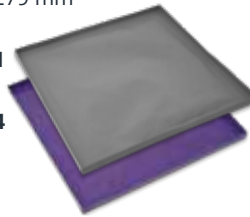

 
- ▷ **Half size cooking tray**
H13 x W279 x D140 mm
(Black)
Part no: **32Z4090**
(Green)
Part no: **32Z4094**

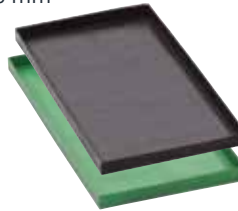

 
- ▷ **Half size deeper cooking tray**
H25 x W279 x D178 mm
(Red)
Part no: **32Z4097**
(Green)
Part no: **32Z4098**
(Blue)
Part no: **32Z4099**
(Black)
Part no: **32Z4076**

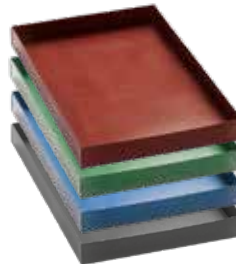

 - ▷ **Quarter size cooking tray**
H13 x W140 x 140 mm
(Black)
Part no: **32Z4089**
(Red)
Part no: **32Z4123**
(Green)
Part no: **32Z4095**
(Blue)
Part no: **32Z4125**

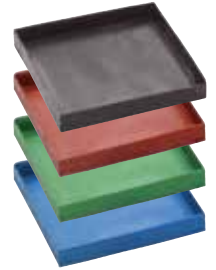

 - ▷ **Full size mesh cooking tray**
H13 x W279 x D279 mm
(Black) Part no: **32Z4081**

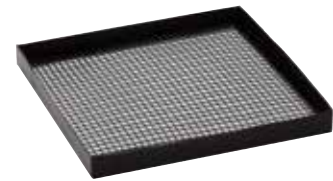

- ▷ **Moveable oven trolley**
H1090 x W469 x D636 mm
Part no: **SR329**

Available for e2s and connex 12 only



- ▷ **Rear oven panel for added aesthetics**
H50 x W591 x D355 mm
(Black)
Part no: **PSB2116**
(Stainless steel)
Part no: **PSB2115**
Available for connex 12 only.

 


- ▷ **Rear oven panel for added aesthetics**
H50 x W591 x D355 mm
(Black)
Part no: **PSB248**
or from September 2021 **PSB2116**
(Stainless steel)
Part no: **PSB272**
or from September 2021 **PSB2115**
(Red)
Part no: **PSB247**
Available for e2s only.

Merrychef eikon® e4, eikon® e4s



- ▷ **Gridded cook plate**
H26 x W369 x D305 mm
Part no: **DV0860**

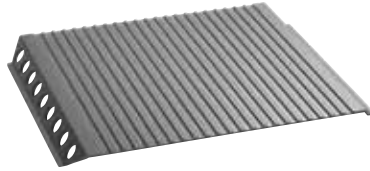

- ▷ **Vitreous baking/roasting tray**
H25 x W321 x D297 mm
Part no: **DX0117**



- ▷ **Mesh tray full size**
H25 x W343 x D292 mm
(Black)
Part no: **32Z4031**



- ▷ **Tray handle for use with DX0117**
H25 x W264 x D91 mm
Part no: **SR313**



- ▷ **Moveable oven trolley**
H1200 x W700 x D690 mm
Part no: **40H0098**



- ▷ **Paddle with hand guard and sides**
W328 x D311 mm
Part no: **SR320**



- ▷ **Paddle without sides**
W328 x D311 mm
Part no: **SR310**



- ▷ **Non-stick baking/roasting tray**
H15 x W300 x D271 mm
Part no: **40H0230**



- ▷ **Non-stick roasting tray liner**
W277 x D236 mm
Part no: **DX0254**



 
- ▷ **Cool down pan**
1/2 size 100 mm deep
Part no: **32Z4028**



Merrychef eikon® e4 only

▷ **Gridded accessory pack**

Part no: **PSA1108**

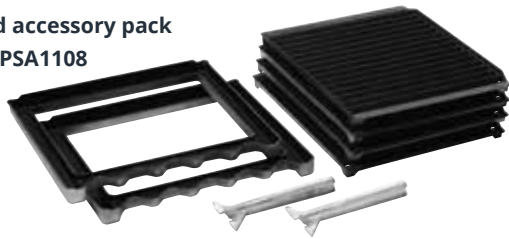

▷ **Flat cook plate**

H26 x W369 x D305 mm

Part no: **PSA1248**



▷ **Wire rack**

H32 x W362 x D290 mm

Part no: **PDV0907**



▷ **4x cook plates ideal for grilling and higher protein food**

H25 x W346 x D279 mm

Part no: **PSA299**



▷ **Solid base tray full size**

H25 x W356 x D305 mm

(Black)

Part no: **32Z4070**



▷ **Tray handle for use with PSA1108**

H25 x W250 x D76 mm

Part no: **DV0344**



▷ **Frame for PSA299 to catch grease**

H30 x W340 x D296 mm

Part no: **DV0343**



Merrychef eikon® e4s only

▷ **Flat cook plate**

H25 x W371 x D355 mm

Part no: **DV0870**



▷ **Solid base tray full size**

H25 x W343 x D343 mm

(Black)

Part no: **32Z4086**



▷ **Cook plate ideal for pizzas**

H16 x W371 x D355 mm

Part no: **DV0880**



▷ **Wire rack**

H36 x W366 x D344 mm

Part no: **PDV0908**



Merrychef panini press



The paddle (included) slides food between a top grill plate and a bottom plate. When the paddle is removed the grill will lower to compress the food.

Panini press kit

▷ **High opening panini press with grilled bottom plate**

W348.8 x D301 mm
Opening H79 mm, Closing H30 mm

Part no: **PSA1298**

This kit includes:

- Panini press
- Paddle
- Mesh basket
- Red brush
- Scraper

▷ **Panini press mesh tray**

H91.1 x W292 x D292 mm

Part no: **32Z4171**



▷ **Scraper**

Part no: **32Z4191**



▷ **Red brush (hard bristles)**

Part no: **32Z4189**



Merrychef eikon® e3



- ▷ **Flat turn-table plate**
H40 mm x Ø 312 mm
Part no: **40H0347**



- ▷ **Gridded insert for turn-table plate**
H25 mm x Ø 312 mm
Part no: **40H0240**



- ▷ **Non-stick cooking liner**
Ø 287 mm
(Natural)
Part no: **40H0190**
(Green)
Part no: **40H0351**



- ▷ **Cool down pan**
1/6 size 150 mm deep
Part no: **32Z4043**



- ▷ **Non-stick tray ideal for baking/roasting**
H15 x W300 x D271 mm
Part no: **40H0230**



- ▷ **Enamel tray ideal for baking/roasting**
H25 x W321 x D297 mm
Part no: **DX0117**



 
- ▷ **Moveable oven trolley**
H1200 x W700 x D690 mm
Part no: **40H0098**



- ▷ **Non-stick roasting tray liner**
W277 x D236 mm
Part no: **DX0254**



- ▷ **Wire rack**
H30 x W323 x D275 mm
Part no: **DR0056**

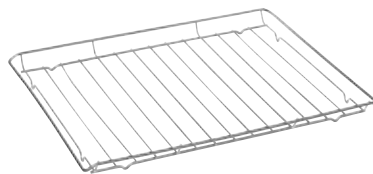

- ▷ **Tray handle is compatible with 40H0347 and DX0117**
H25 x W264 x D91 mm
Part no: **SR313**



- ▷ **Turn-table disk for use with 40H0347**
Ø 191 mm
Part no: **40H0249**





Merrychef eikon® e5



▷ **Paddle without sides**

W328 x D311 mm

Part no: **SR310**



▷ **Tray handle for use with**

P40C1423/P40C1151/P40C1157

H25 x W264 x D91 mm

Part no: **SR313**



▷ **Paddle with hand guard and sides**

W328 x D311 mm

Part no: **SR320**



▷ **Enamel baking/roasting tray**

H25 x W432 x D336 mm

(Black)

Part no: **P40C1423**

(Green)

Part no: **P40C1151**

(Blue)

Part no: **P40C1157**



▷ **Cool down pan**

1/2 size 100 mm deep

 
Part no: **32Z4028**



▷ **Wire rack**

H32 x W435 x D332mm

Part no: **DR0057**

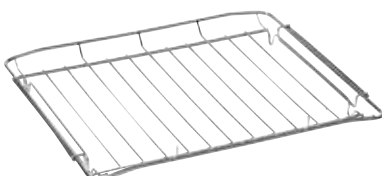

▷ **Non-stick roasting tray liner**

W390 x D295 mm

Part no: **40C1218**





Signature range

The Signature range will suit most of our ovens to provide you with the broadest range of applications and are highly durable, long-lasting and dishwasher compatible.

- ▷ **Small bowl**
H35.6 x Ø 180 mm
Part no: **32Z4115**



 
- ▷ **1/2 ltr container**
H63.5 x W172.7 x D175.3 mm
Part no: **32Z4119**



- ▷ **1 1/2 ltr container**
H58.5 x W235 x D235 mm
Part no: **32Z4158**




- ▷ **1 ltr container**
H63.5 x W325.1 x D175.3 mm
Part no: **32Z4118**
Not suitable for e1s/e2s/e3/12e.

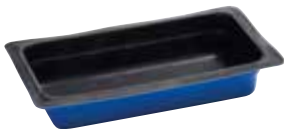


- ▷ **Large cook tray**
H22.9 x W355.6 x D298.5 mm
Part no: **32Z4128**
Not suitable for e1s/e2s/e3/12e.



 - ▷ **Small lidded solid tray**
H19.0 x W294.6 x D294.6 mm
Part no: **32Z4134**
Not suitable for e3.

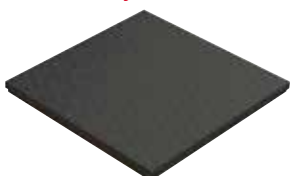

 - ▷ **Large lidded solid tray**
H35 x W358.1 x D307.3 mm
Part no: **32Z4133**
Not suitable for e1s/e2s/e3/12e.

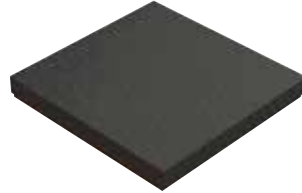

- ▷ **2x non-stick mould**
H35 x W230 x D115 mm
Part no: **32Z4126**



- ▷ **4x non-stick mould**
H20.3 x W254 x D254 mm
Part no: **32Z4113**
Not suitable for e3.



- ▷ **9x non-stick mould**
H20.3 x W279 x D279 mm
Part no: **32Z4132**
Not suitable for e3.



 
- ▷ **12x non-stick mould**
H20.3 x W368 x D279 mm
Part no: **32Z4131**
Not suitable for e1s/e2s/e3/12e.



- ▷ **9x square mould**
H23.5 x W346 x D295 mm
Part no: **32Z4196**
Not suitable for e1s/e2s/e3/12e/12.




- ▷ **12x dumpling tray**
H31.7 x W279 x D279 mm
Part no: **32Z4116**
Not suitable for e3.

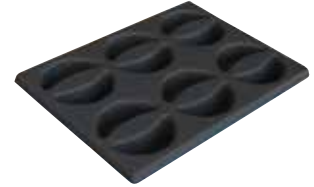

- ▷ **2x dumpling tray**
110mm x 110mm x 60mm
Part no: **32Z4117**

 - ▷ **Air frying tray**
H50 x W280 x D280 mm
(Black) Part no: **32Z4032**
Not suitable for e3.

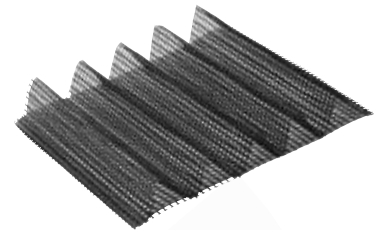

- ▷ **Tongs**
Part no: **32Z4156**



- ▷ **Spatula**
H100 x W79 x D300 mm
Part no: **32Z4034**



Merrychef oven cleaning and protecting accessories



To keep your Merrychef oven in top condition and ensure it works efficiently around the clock, it is essential to follow a daily cleaning routine.

A consistently clean oven lays the foundation for optimal performance, reduces downtime and maintenance costs, and extends the life of your oven.

Merrychef offers a wide range of cleaning tools, with supporting guides and instructional videos available at merrychef.com.

New - Merrychef oven cavity liner

Revolutionising cleaning for a Merrychef conneX 12 oven.

The liner covers the walls and door of the oven cavity, capturing food debris and grease. This leaves just two surfaces to clean, resulting in significant savings on cleaning chemicals and labour time.



▷ **Cavity liner**
H120 x W644.6 x D455 mm
Part no: **PSY183**

Cleaning tablets



Dilute – shake – **SAVE**
1 box contains 20 individually wrapped tablets and a trigger head 24oz bottle
20 tablets = 10 x 750 ml cleaner bottles – significantly reducing plastic bottle consumption, costs of transport and storage.

▷ **Cleaning tablets**
Part no: **32Z4222**

Cleaning kit

Part no: **SR152**

Starter kit for customers looking to find everything in one place to clean their oven.

Contains x1 oven cleaner, x1 oven protector, Red scraper, Red brush, steam pipe cleaner, Microfibre brush for cleaning the gasket, sponges and microfibre cloths.



Cleaning tools for your Merrychef oven



▷ **Red brush (hard bristles)**
Part no: **32Z4189**



▷ **Scraper**
Part no: **32Z4191**



▷ **Pipe cleaner**
Part no: **32Z4188**



▷ **Microfibre brush**
Part no: **32Z4225**



▷ **Oven cleaner**
6 x 750ml (1box)
Part no: **32Z4024**



▷ **Oven protector**
6 x 750ml (1box)
Part no: **32Z4025**

Our specially formulated cleaner is non-abrasive and if used regularly, will quickly cut through any grease or food debris built up on your Merrychef oven.

After cleaning we recommend you thinly coat your oven with the Merrychef oven protector to provide a barrier against further build-up of grease and make regular cleaning quicker and easier.

 
ALL Merrychef accessories are:

- ✔ Made from compatible materials for high speed ovens, either 100% PTFE or specifically coated in a material that reduces or eliminates oven arcing which may occur with unapproved metal accessories.
- ✔ Easy to wipe clean in-between programmes and dishwasher safe.
- ✔ Durable and long lasting.

Do's and Don'ts:

- ✔ **Do** use approved Merrychef accessories in your oven which have all been safety tested.
- ✔ **Do** Cook food on an accessory or oven liner and not directly on the cook plate to avoid the build-up of grease and food in your oven.
- ✔ **Do** wipe clean the accessories after every use to avoid any cross contamination, using coloured trays for specific foods, where available.
- ✘ **Don't** use unapproved accessories with your Merrychef oven, they may cause damage and **will invalidate your warranty**, particularly if they are uncoated metal.
- ✘ **Don't** use the cool pans that are provided with Merrychef ovens to cook with. They have been designed to hold ice to speed up the cooling down process prior to cleaning your oven.

Merrychef accessories can be purchased from your local dealer, or to find a supplier go to:
www.merrychef.com/Sales/Sales-Locators

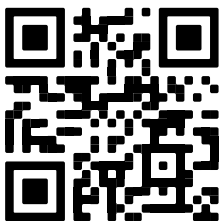

To view our full accessories range please visit
www.merrychef.com/Products/Accessories-Merrychef



Follow our Youtube channel to see our full accessories video and more
[@merrychef-highspeedovens](https://www.youtube.com/@merrychef-highspeedovens)



MERRYCHEF®

With over 70 years' experience Merrychef is the world's expert in designing and manufacturing high speed ovens. Our state-of-the-art factory, based in Sheffield, UK, has the flexibility to customise orders, build to demand and distribute globally, allowing us to become the brand most trusted by global fast-food operations and coffee chains. We offer best in class performance quality, energy-efficiency, product reliability as well as unrivalled service and chef support.