

Congratulations! You have just purchased one of the premium products from 3monkeez Stainless Steel commercial hardware and accessories range. Proudly manufactured to Australian Standards.

SCOPE OF APPLICATION

BRK-C	Freestanding Glass Rack - complete bay. Includes 2x end frame with notched channel and tray slides.
BRK-DW-C	Freestanding Dishwasher Rack - complete bay. Includes 2x end frame with notched channel and tray slides.
BRK-1	Freestanding Glass Rack - add on bay only. 1 x end frame with notched channel and tray slides.
BRK-DW-1	Freestanding Dishwasher Rack - add on bay only. 1 x end frame with notched channel and tray slides.

IMPORTANT INFORMATION



Note: Please follow the below procedures. If the below procedures are not followed it may impact the life of some components and void warranties.

This product is shipped in flat-pack form and requires assembly.
Some parts of the assembly process may require a second person to assist and hold parts in place.
The following tools are required: A "Pop" rivet gun or pliers, soft face hammer and a set square.

INSTALLATION INSTRUCTIONS

Step 1

Open box and identify the following packages:

- Side frame assemblies left and right.
- Cross rails. There should be 4 x U shaped channels bundled together.
- Tray slide rails. 4 x left hand and 4 x right hand,
- 4 x FH17 nylon end insert with FH-13 adjustable feet.
- Pkt of 16 "pop" rivets 4mm x 12mm.

Step 2

Unwrap side frames and cross-rails.

Step 3


Insert the FH-17 nylon end inserts into the legs and tap in with a soft-faced hammer.

Step 4

Assemble one end of a cross rail to the top of a side frame assembly and insert the pop rivets. Check that the brace is square to the frame and fasten the rivets with the rivet gun.

Step 5

Add a second brace at the lower end of the side frame. Insert rivets, check squareness and fasten.

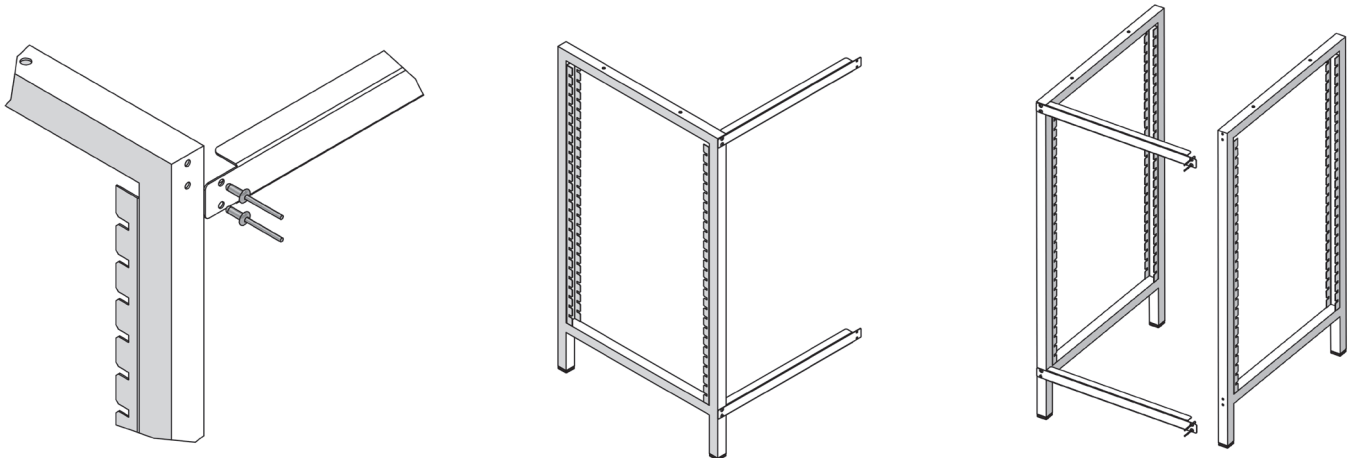

Step 6




Mate the other side frame assembly to the ends of the two cross rails. You may need the help of a second person to hold things steady. Insert the pop rivets, check squareness and fasten.

Step 7

Taking care not to bend the cross-rails, stand the frame up on its legs. Attach the two remaining cross rails and fasten.

Step 8

Screw the FH-13 feet into the FH-17 nylon end inserts and adjust until the frame is level and at the correct height.

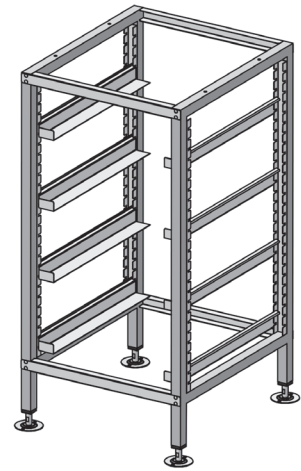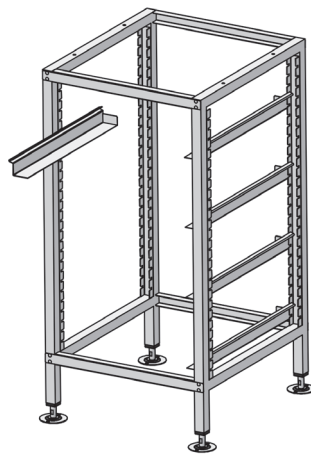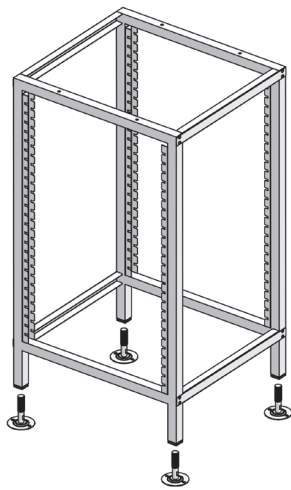

Step 9



Hook the slide rails into the notched channel in the side frames to complete the assembly.

BRK-1 and BRK-DW-1 add-on bay kits. - Assembly is best done at the same time as your BRK-C kit

Open box and identify the following packages:

- 1 only side frame assemblies left and right.
- Cross rails. There should be 4 x U shaped channels bundled together.
- Tray slide rails. 4 x left hand and 4 x right hand,
- 2 x FH17 nylon end insert with FH-13 adjustable feet.
- Pkt of 16 "pop" rivets 4mm x 12mm.

Assembly is the same as steps 1 - 5 for the BRK-C or BRK-DW-C rack. DO NOT FASTEN THE POP RIVETS !

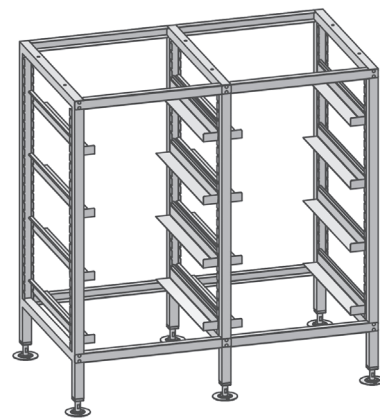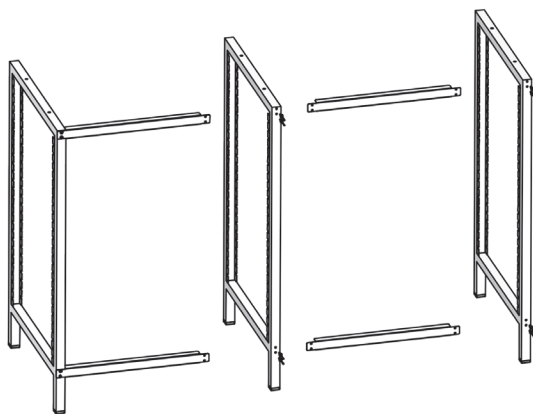

Step 6

Mate the side frames to the cross rails. You may need the help of a second person to assist and hold things steady. Insert the pop rivets, check squareness and fasten.

Step 7

Taking care not to bend the cross-rails, stand the frame up on its legs. Attach the four remaining cross rails and fasten.

Step 8

Screw the FH-13 feet into the FH-17 nylon end inserts and adjust until the frame is level and at the correct height.

NOTE

If you are adding a BRK-1 or BRK-DW-1 kit to an existing rack that has already been assembled, then you will need to drill out and remove pop rivets with a 4mm drill.

It is recommended that you do this one cross rail at a time. Add the cross rail, replace and fasten rivets before moving on to the next cross rail.

This method may prove to be much easier than drilling out all 8 cross rail rivets on and then trying to re-assemble the rack.