



INSTALLATION AND OPERATION MANUAL

'VEE-RAY' GAS FRYERS

GT60HPO



Date Purchased _____

Serial Number _____

Dealer _____

Service Provider _____

MANUFACTURED BY

Moffat Limited

Rolleston 7675
New Zealand

INTERNATIONAL CONTACTS

AUSTRALIA

Moffat Pty Limited

E.Mail: vsales@moffat.com.au
Main Office: (tel): +61 (03) 9518 3888
(fax): +61 (03) 9518 3838
Service: (tel): 1800 622 216
Spares: (tel): 1800 337 963
Customer Service: (tel): 1800 335 315
(fax): 1800 350 281

CANADA

Serve Canada

Web: www.servecanada.com
E.Mail: info@servecanada.com
Sales: (tel): 800 551 8795 (Toll Free)
Service: (tel): 800 263 1455 (Toll Free)

NEW ZEALAND

Moffat Limited

Web: www.moffat.co.nz
E.Mail: sales@moffat.co.nz
Main Office: (tel): 0800 663328

UNITED KINGDOM

Blue Seal

Web: www.blue-seal.co.uk
E.Mail: sales@blue-seal.co.uk
Sales: (tel): +44 121 327 5575
(fax): +44 121 327 9711
Spares: (tel): +44 121 322 6640
(fax): +44 121 327 9201
Service: (tel): +44 121 322 6644
(fax): +44 121 327 6257

UNITED STATES

Moffat

Web: www.moffat.com
Sales: (tel): 800 551 8795 (Toll Free)
(tel): +1 336 661 1556
(fax): +1 336 661 9546
Service: (tel): 800 858 4477 (Toll Free)
(tel): +1 366 661 1556
(fax): +1 336 661 1660

REST OF WORLD

Moffat Limited

Web: www.moffat.co.nz
E.Mail: export@moffat.co.nz

The reproduction or copying of any part of this manual by any means whatsoever is strictly forbidden unless authorized previously in writing by the manufacturer.

In line with policy to continually develop and improve its products, Moffat Ltd. reserves the right to change the specifications and design without prior notice.

© Copyright Moffat Ltd. December 2014.

GT60HPO 'VEE-RAY' GAS FRYER (Single Tank - 31ltr)

Introduction 2

Specifications 3

 Model Numbers Covered in this Specification

 Gas Supply Requirements

 Electrical Supply Requirements

Dimensions 4

Installation 5

 Installation Requirements

 Unpacking

 Location

 Clearances

 Assembly

 Electrical Connection

 Gas Connection

 Commissioning

Operation..... 9

 Operation Guide

 Description of Controls

 Filling the Tank

 Lighting the Main Burners

 Setting the Operating Temperature

 Turning 'OFF' the Fryer

Cleaning and Maintenance 12

 General

 Draining and Daily Cleaning

 Weekly Cleaning

 Periodic Maintenance

Fault Finding..... 15

 Guide to Cooking Problems with Fryer

 Fault Finding the Gas System - Fault Finding Table

Circuit Wiring Schematic..... 18

Gas Conversion and Specifications 19

 Conversion Procedure

 Gas Specifications

Replacement Parts List 22

Introduction

We are confident that you will be delighted with your BLUE SEAL HPO Fryer, and it will become a most valued appliance in your commercial kitchen.

To ensure you receive the utmost benefit from your new BLUE SEAL Appliance, there are two important things you can do.

Firstly:

Please read the instruction book carefully and follow directions given. The time taken will be well spent.

Secondly:

If you are unsure of any aspect of the installation instructions or performance of your appliance, contact your BLUE SEAL dealer promptly. In many cases a phone call could answer your question.



Warning

IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS APPLIANCE.



Warning

INSTRUCTIONS TO BE FOLLOWED IN THE EVENT THE USER SMELLS GAS ARE TO BE POSTED IN A PROMINENT LOCATION. THIS INFORMATION SHALL BE OBTAINED BY CONSULTING THE LOCAL GAS SUPPLIER.



Warning

THE OPERATOR MUST TAKE GREAT CARE TO USE THE EQUIPMENT SAFELY TO GUARD AGAINST RISK OF FIRE AND INJURY.

- THE APPLIANCE MUST **NOT** BE LEFT ON UNATTENDED.
- IT IS RECOMMENDED THAT A REGULAR INSPECTION IS MADE BY A COMPETENT SERVICE PERSON TO ENSURE CORRECT AND SAFE OPERATION OF YOUR APPLIANCE IS MAINTAINED.
- **DO NOT** STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPOURS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.
- **DO NOT** SPRAY AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILE IT IS IN OPERATION.



Caution

- This appliance is for professional use and is only to be used by qualified persons.
- Only authorised service persons are to carry out installation, servicing or gas conversion operations.
- Components having adjustments protected (e.g. paint sealed) by the manufacturer should not be adjusted by the user / operator.
- **DO NOT** operate the appliance without the legs supplied fitted.

Model Numbers Covered in this Specification

GT60HPO 'VEE-RAY' GAS FRYER (Single Tank - 31 ltr).

Gas Supply Requirements

- Australia:

	Natural Gas	LP Gas (Propane)
Input Rating (N.H.G.C.)	140 MJ/hr	140 MJ/hr
Supply Pressure	1.13 - 3.40 kPa	2.75 - 3.40 kPa
Burner Operating Pressure (*)	0.87 kPa (*)	2.55 kPa (*)
Gas Connection	3/4" BSP Male	

- New Zealand:

	Natural Gas	LP Gas
Input Rating (N.H.G.C.)	140 MJ/hr	140 MJ/hr
Supply Pressure	1.13 - 3.40 kPa	2.75 - 3.40 kPa
Burner Operating Pressure (*)	0.87 kPa (*)	2.55 kPa (*)
Gas Connection	3/4" BSP Male	

- All Other Markets:

	Natural Gas	LP Gas (Propane)	Butane
Input Rating (N.H.G.C.)	140 MJ/hr	140 MJ/hr	140 MJ/hr
Supply Pressure	1.13 - 3.40 kPa	2.75 - 3.40 kPa	2.75 - 3.40 kPa
Burner Operating Pressure	0.87 kPa (*)	2.55 kPa (*)	2.30 kPa (*)
Gas Connection	3/4" BSP Male		

NOTE:

- (*) Measure burner operating pressure at Operating Pressure Test Point (Lower - Out) on gas control valve with both burners operating at the 'High Flame' setting. Refer to 'Gas Conversion and Specification' Section for further details.

NAT, LPG & Butane Only - Operating pressure is ex-factory set and is not to be adjusted, unless when converting between gases, if required.

Refer to the information in this section for further details.




Electrical Supply Requirements

GT60HPO - 220-240 V a.c, 50 Hz, 0.5 A, 1P+N+E.

3 pin 10 A cord set fitted.

Dimensions

Dimensions: GT60HPO

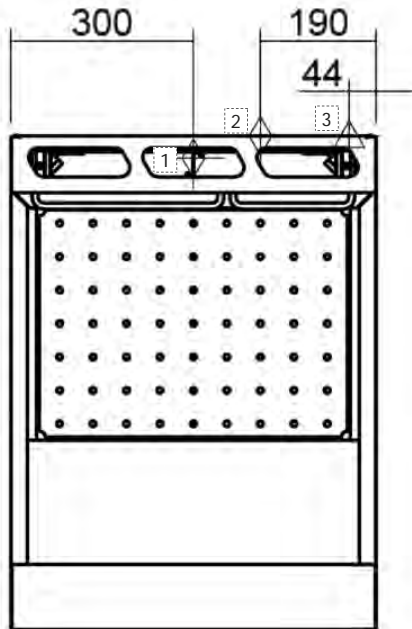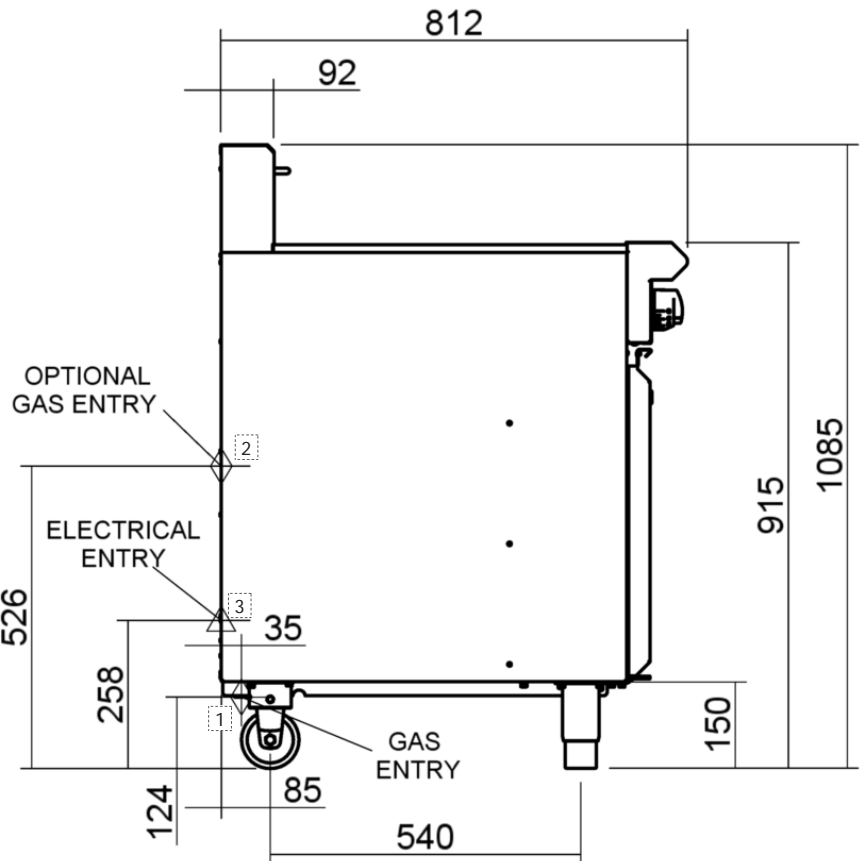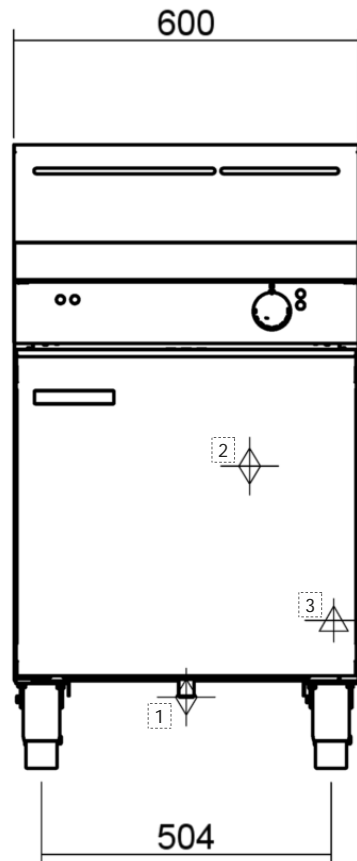

- 1. Primary Gas Entry Point.
- 2. Optional Gas Entry Point.
- 3. Electrical Entry Point.

Installation Requirements

NOTE:

- It is most important that this appliance is installed correctly and that operation is correct before use. Installation shall comply with local gas, electrical and health and safety requirements.
- This appliance shall be installed with sufficient ventilation to prevent the occurrence of unacceptable concentrations of health harmful substances in the room, the appliance is installed in.

Blue Seal 'Vee-Ray' HPO Fryers are designed to provide years of satisfactory service and correct installation is essential to achieve the best performance, efficiency and trouble-free operation.

This appliance must be installed in accordance with National installation codes and in addition, in accordance with relevant National / Local codes covering gas, electrical, fire and health and safety.

Australia / New Zealand: - AS5601.1 - Gas Installations.

Australia / New Zealand: - AS / NZS3000 - Wiring Rules.

Installations must be carried out by authorised persons only. Failure to install equipment to relevant codes and manufacturers specifications shown in this section will void the warranty.

Components having adjustments protected (e.g. paint sealed) by manufacturer are only to be adjusted by an authorised service agent. They are not to be adjusted by the installation person.

Unpacking

- Remove all packaging and transit protection from appliance, including all protective plastic coating from door, outer panel and exterior stainless steel panels.
- Check equipment and parts for damage. Report any damage immediately to carrier and distributor.
- Report any deficiencies to distributor who supplied the appliance.
- Check available gas supply is correct to as shown on rating plate located behind access door.
- Check the following parts have been supplied with the appliance:-

GT60HPO

Baskets	2
Basket Grids	1
Flue Diverter	1
Fryer Lid	1
Drain Extension	1
Drain Stick	1

Location

1. This appliance must be installed in a suitably ventilated room to prevent dangerous build up of combustion products.
2. Installation must allow for a sufficient flow of fresh air for combustion air supply. Combustion air requirements:-

Combustion Air Requirements

All Gas Types 24 m³/hr minimum.

3. Never directly connect a ventilation system to the appliance flue outlet.
4. A minimum of 610mm clearance must be maintained from flue outlet to any above surface.
5. Position appliance in its approximate working position.
6. All air for burner combustion is supplied from beneath the unit. Legs must always be fitted and no obstructions placed under or around the base of the fryer, as obstructions will cause incorrect operation and / or failure of the fryer.

NOTE: Do not obstruct or block the appliance flue. Never directly connect a ventilation system to the appliance flue outlet.

Installation

Clearances

NOTE:

- Only non-combustible materials can be used in close proximity to this appliance.
- To allow easy operation, drainage and servicing of the appliance, a minimum of 600mm clearance should be maintained at front of the appliance.

Any gas burning appliance requires adequate clearance and ventilation for optimum and trouble-free operation. The following minimum installation clearances are to be adhered to:

	Combustible Surface	Non Combustible Surface
Left / Right Hand Side	50mm	0mm
Rear	50mm	0mm

Assembly

This model is delivered completely assembled. Ensure that the legs are securely attached.

NOTE:

- This appliance is fitted with adjustable feet so that it can be positioned securely and level. This should be carried out on completion of gas connection. Refer to 'Gas Connection' section.

Optional Accessories (Refer to Replacement Parts List)

- Plinth Kit. For installation details, refer to instructions supplied with each kit.

Electrical Connection

NOTE: ALL ELECTRICAL CONNECTIONS MUST ONLY BE CARRIED OUT BY AN AUTHORISED PERSON.

Each fryer should be connected to an adequately protected power supply and an isolation switch mounted adjacent to, but not behind the fryer. This switch must be clearly marked and readily accessible in case of fire.

NOTE:

- This appliance must be grounded / earthed.

Gas Connection

NOTE: ALL GAS FITTING MUST ONLY BE CARRIED OUT BY AN AUTHORISED PERSON.

- Flexible Hose Connection

If a Gas Hose assembly is used to connect this appliance, hose and all fittings must have a minimum $\frac{3}{4}$ " (Natural Gas) or $\frac{1}{2}$ " (LPG) inside bore diameter to ensure gas flow rate capacity required by this appliance is achieved.

This must be verified by operating pressure testing at maximum gas supply demand condition.

The Gas Hose assembly should also be classified for use in commercial kitchen conditions, appliance will be used in.

Recommended Gas Hose Assembly Specification:

- AS/NZS 1869 Class B or D compliant or equivalent, that meets the following requirements:-

Class	Max Working Pressure at $23 \pm 2^\circ\text{C}$	Working Temperature Range	Resistance to Oil
B	7.0 kPa	- 20°C to + 125°C	Oil resistant lining and cover.
D	2.6 MPa		

1. It is essential that the gas supply is correct for the appliance being installed and that adequate supply pressure and volume are available. The following checks should be made before installation:-
 - a. **Gas Type** the appliance has been supplied for is shown on coloured stickers located above the gas connection and next to the rating plate. Check that this is correct for the gas supply the appliance is being installed for. Gas conversion procedure is detailed in this manual.
 - b. **Supply Pressure** required for this appliance is shown in the 'Specifications' section of this manual. Check gas supply to ensure that adequate supply pressure exists.
 - c. **Input Rate** of this appliance is shown on Rating Plate located on inside of access door and also in 'Specifications' section of this manual. Input rate should be checked against available gas supply line capacity. **Particular note should be taken if appliance is being added to an existing installation.**



NOTE: It is important that adequately sized piping runs directly to the connection joint on the appliance, with as few tees and elbows as possible to give maximum supply volume.

2. A suitable joining compound which resists the breakdown action of LPG, must be used on every gas line connection, unless compression fittings are used.

Connection to the appliance is $\frac{3}{4}$ " BSP male.

NOTE: A Manual Isolation Valve must be fitted to the individual appliance supply line.

3. Correctly locate the appliance into its final operating position and using a spirit level, adjust the legs so that the unit is level and at the correct height.
4. Connect the gas supply to the appliance.
5. Check all gas connections for leakage using soapy water or other gas detecting equipment.



Warning

DO NOT USE A NAKED FLAME TO CHECK FOR GAS LEAKAGES.

Installation

6. Check gas supply pressure is as shown in 'Specifications' section, 'Gas Supply Requirements' table.

NOTE: Measure supply pressure at upper test point (Supply Pressure) on gas control valve.



Caution

Ensure the fryer tank(s) is / are filled with either water or oil prior to starting Main Burners otherwise damage may be caused to tank(s).

7. Light Main Burners. Refer to 'Operation' section, 'Lighting the Main Burners'.
8. Verify that the supply pressure is still correct.

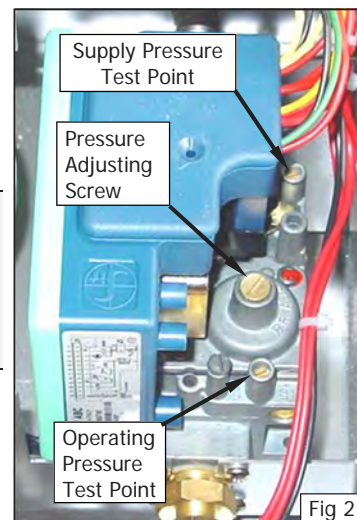


Fig 2

NOTE: Insufficient gas supply line capacity, indicated by supply pressure drop during maximum gas supply demand, is NOT ACCEPTABLE and may invalidate manufacturers warranty for this appliance.

9. Check Main Burner operating pressure (Adjust, using 'Operating Pressure Adjusting Screw' on the gas control valve, see Fig 2), and as shown in 'Gas Conversion and Specifications' section, 'Main Burner Operating Pressure Adjustment'.

Commissioning

Carry out the following commissioning checks before handing over the fryer for use, to ensure that the fryer operates correctly and operator(s) understand the correct operating procedure.

1. Before leaving the new installation;
 - a. Check the following functions in accordance with operating instructions shown in 'Operation' section of this manual.
 - Light the Main Burners.
 - Check the Thermostat Operation (refer to 'Operation' section of this manual).
 - b. The thermostat operation check should be carried out by filling the fryer with oil to the oil 'FILL LEVEL' mark and setting the thermostat to 180°C. Light main burners as shown in 'Operation Instructions' in this manual.

NOTE: If using shortening, the fryer should be filled in accordance with 'Shortening' instructions in 'Operation' section of this manual.

- c. Thermostat calibration should be checked once oil is up to temperature. If a discrepancy is found, thermostat calibration should be referred to the supplier.
- d. Ensure that each operator has been instructed in the areas of correct lighting, operation, and shutdown procedures for this appliance.

Initial Start-Up

Before using the fryer;

- a. For first time use of the new fryer, prior to using for cooking product, fill with oil and operate for about 1 hour to remove any fumes or odours which may be present in the new appliance.
- b. Refer to the Operation Section of this manual for details on how to operate the fryer.
2. This manual must be kept by the owner for future reference and a record of ***Date of Purchase***, ***Date of Installation*** and ***Serial Number of Appliance*** recorded and kept with this manual. (These details can be found on the Rating Plate attached to inside of the access door. Refer to 'Gas Connection' section).

NOTE: If it is not possible to get appliance to operate correctly, shut 'Off' gas supply and contact the supplier of this unit.

Operation Guide



Warning

THE OPERATOR MUST TAKE GREAT CARE TO USE THE EQUIPMENT SAFELY TO GUARD AGAINST RISK OF FIRE AND INJURY.

- DO NOT LEAVE FRYER UN-ATTENDED DURING OPERATION.
- DO NOT REPLENISH THE OIL (FRYING MEDIUM) IN THE FRYER WHEN THE FRYER IS **HOT**.
- DO NOT OVER FILL THE OIL (FRYING MEDIUM) IN THE FRYER ABOVE THE TOP LEVEL MARK.
- DO NOT ALLOW THE OIL (FRYING MEDIUM) IN THE FRYER TO FALL BELOW THE LOWER LEVEL MARK.
- DO NOT ALLOW THE OIL (FRYING MEDIUM) IN THE FRYER TO OVERHEAT.
- DO NOT INTRODUCE WET FOOD OR WATER INTO THE **HOT** OIL (FRYING MEDIUM).
- DO NOT USE FLAMMABLE SOLVENTS AND CLEANING AIDS ON OR IN CLOSE PROXIMITY TO THE FRYER WHILST THE FRYER IS STILL **HOT**.




Caution

- This appliance is for professional use and is only to be used by qualified persons.
- Only authorised service persons are to carry out installation, servicing or gas conversion operations.
- Components having adjustments protected (e.g. paint sealed) by the manufacturer should not be adjusted by the user / operator.

Description of Controls

GT60HPO (Access Door Shown Removed)

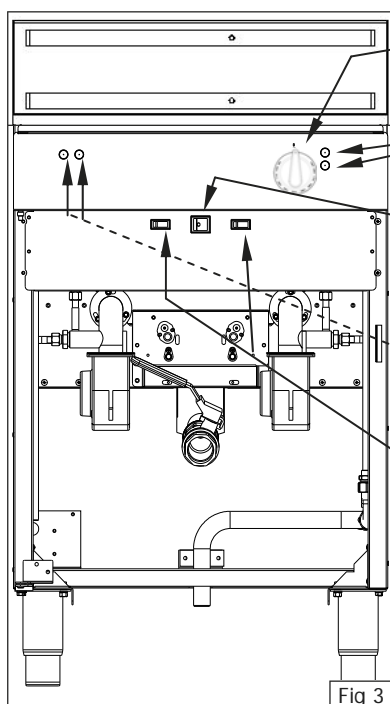

Thermostat Control Knob
Temperature Graduations
95°C to 195°C.

Power 'ON' and
Heating Indicators
(White top)
(Orange bottom)

Power 'ON' and Heating 'On' Indicators. (Indicates when power is applied to unit and when burners are cycling 'On' to maintain set temperature).

Main Power
Switch

Turns power 'ON' and 'OFF' to the unit. (Red LED Indicator illuminates when switched 'ON').

Neon Lock-Out
Indicators
(Red)

Left and Right Lock Out Reset Indicators.

Located Behind Main Access Door

Left and Right
Burner Reset
Switches

Operating these switches resets the burner selected. (Press and release to operate).


Operation

Filling the Tank



Warning

DANGER OF FIRE EXISTS IF THE OIL LEVEL IS BELOW THE MINIMUM 'LO' INDICATED LEVEL.

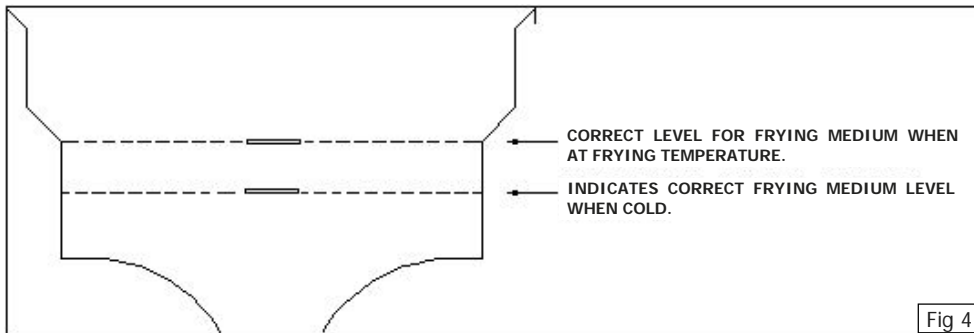

NOTE: BLUE SEAL 'VEE-RAY' HPO fryers can be used with both oil and shortening.

1. Before filling the tank, always check that the drain valve, located behind the access door, is closed. A locking slide is provided on the valve and this should always be locked in the 'Closed' position during use.

OIL - Carefully fill the fryer tank with oil to the lower 'Fill Level' mark. Set the thermostat to the required operating temperature, the oil will expand as heated and will reach the upper level mark when the oil is hot (180-190°C).

- GT60HPO fryer will hold 31 litres of oil.

SHORTENING - Ideally the shortening should be pre-melted prior to putting it into the tank. This is normally done in a suitable vessel on a boiling table burner. The liquefied shortening can then be poured into the tank until it reaches the 'FILL LEVEL' mark.

- GT60HPO fryer will hold 46.5 lbs shortening.

Pre-Heating

NOTE: When pre-melting shortening, only heat until the shortening is just liquefied. Do not bring shortening up to high temperature as handling of hot shortening is dangerous.

- If pre-melting of shortening is not possible, then cut shortening in to pieces and pack into tank.
- Light main burners and manually cycle burners **On/Off** until shortening has liquefied. Ideally main burners should be cycled **On** for 5 seconds and **Off** for 10 seconds. Repeat the cycle until all the shortening is melted. Following this procedure should allow the shortening to liquefy gradually without scorching. Once shortening has liquefied, it can be brought up to fryer operating temperature.
- To speed up this process, break up the shortening and stir carefully during the melting process. Add more shortening until the tank is filled to the upper level marked on the tank. Refer to Fig 4 above.

NOTE: Running the burners continuously will cause the shortening in contact with the tank to overheat, resulting in premature oil breakdown. Never allow the shortening to smoke while melting as this indicates that the temperature is too high. If shortening starts smoking, increase main burner 'Off' intervals.

Lighting the Main Burners

1. Turn 'ON' the fryer main power switch, located in the centre of the lower control panel. The main power switch will illuminate (Red) and the white (Power On) neon on right hand side of upper control panel will illuminate.
2. Check that the 2 (Red) lock out indicator Led's on the left hand side of control panel are not illuminated. If any of lock out indicator Led's are illuminated, press left or right hand burner reset switches on either side of main power switch thermostat knob, to reset the control system for either left or right hand side burner.
3. Set the thermostat knob to required frying temperature.
4. The 'Orange' heating indicator on the RH side of the top control panel will illuminate when burners are On and will go out when oil is at pre-set temperature.
5. If left or right (Red) 'Lock Out' indicators illuminate, press left or right hand burner reset switches on either side of the thermostat knob to reset control system for that burner.

Setting the Operating Temperature

1. The temperature used for frying food is the most important aspect of fryer operation. Incorrect temperatures will result in poor product quality and will reduce the life of oil / shortening.
2. Temperature can be set from 95°C to 195°C, we do not recommend food be cooked above 190°C.
3. Main burners will operate automatically to maintain this temperature.
4. As a safety precaution all BLUE SEAL 'Vee-Ray' fryers feature an Over-Heat control which will turn Off the fryer in the event that the oil reaches over 220°C, should there be a thermostat failure.
5. If a fault occurs or the fryer is not functioning correctly, contact your local service agent.

Turning 'OFF' the Fryer



Caution

Turning 'OFF' the thermostat does not turn 'OFF' main power to fryer. Power should ALWAYS be turned 'OFF' at main power switch on control panel.

1. Turn 'OFF' the main power switch located on the fryer front control panel, the red indicator on the 'ON' - 'OFF' main power switch will extinguish. Close the main access door.
2. Check that the two 'Red' neon indicators located on the front control panel have extinguished.
3. The thermostat control knob can be left at the normal operating temperature for future use.

IMPORTANT:

Should any abnormal operation like;

- ignition problems,
- abnormal burner flame,
- burner control problems,
- partial or full loss of burner flame in normal operation,

If any of the above problems are noticed, the appliance requires IMMEDIATE service by a qualified service person and should not be used until a service is carried out.

Cleaning and Maintenance

General



Warning

DO NOT USE FLAMMABLE SOLVENTS AND CLEANING AIDS ON OR IN CLOSE PROXIMITY TO FRYER WHILST FRYER IS STILL HOT.



Caution

Always turn 'Off' the gas and electrical supply before cleaning.

This appliance is not water proof.

Do not use water jet spray to clean interior or exterior of this appliance.

- To achieve the best results, cleaning must be regular and thorough and all controls and mechanical parts should be checked and adjusted periodically by a competent serviceman. If any small faults occur, have them attended to promptly.
- Don't wait until they cause a complete breakdown. It is recommended that the appliance is serviced every 6 months.
- Clean the fryer regularly. A clean fryer looks better, will last longer and will perform better.

NOTE:

- **DO NOT use sharp scrapers, strong solvents, abrasive or caustic detergents as they could corrode or damage the fryer.**
- **Ensure that any detergent or cleaning material has been completely removed after each cleaning.**

To keep your fryer clean and operating at peak efficiency, follow the procedures below:-

Draining and Daily Cleaning

1. At the end of each day or at the end of each shift, if frying schedule is heavy, frying medium should be drained and filtered into a receptacle.



Warning

DO NOT ATTEMPT TO MOVE FRYER WHILST FRYER IS FULL OF OIL.




Caution

Never drain fryer with burners turned 'ON'.

Always switch 'OFF' fryer before draining or re-filling tank.

2. Always filter the fryer when the cool zone under the burners is still hot and liquid. A cold fryer heated up won't drain, because frying medium in this zone will remain hard, if using solid fat / oils.
3. Screw the drain extension pipe onto the end of the drain valve (see Fig 5) and position a suitable container and filter under the drain extension pipe.

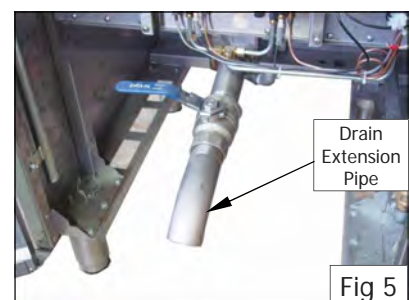

Opening the Drain Valve



Warning

HOT OIL WILL BURN - DO NOT RUSH THIS JOB.

- a. Lift locking slide on valve handle (Fig 6) to release valve.
- b. While holding locking slide in withdrawn position, rotate handle anticlockwise (Fig 7) to open valve.
- c. When valve is closed, locking slide will drop down over locking valve to prevent accidental opening of the valve (See Fig.6).

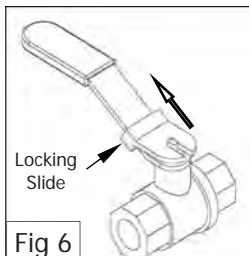


Fig 6

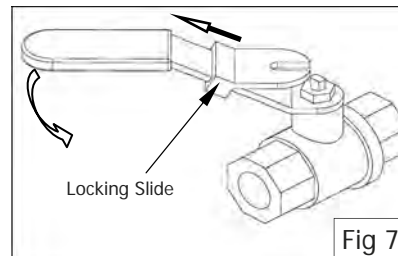


Fig 7

4. Do not empty all of fryer contents into one large container, as this will be dangerous and may be difficult, when lifted up, to pour hot oil back into tank.
5. Slip a muslin or other suitable filter bag over the end of the drain valve. Crumbs will be caught in the bag but frying medium will strain freely through into receptacle.
6. Open drain valve slowly to minimise splashing, and take care not to overfill the container.
7. If necessary, use the drain stick (see Fig 8) to dislodge any blockages in the drain.
8. When tank has been drained, use a ladle or small pan with a handle and dip into hot frying medium from container and pour around sides and bottom of tank to wash out crumbs and particles adhering to tank.
9. Continue to dip and pour until all crumbs are washed down and into the filter bag.
10. Open the drain valve fully and check for any particles or crumb residue lodged in valve. Clean out the valve with a stiff nylon brush. Do not use a wire brush as this will damage the valve seating and will eventually cause the valve to leak. If the obstruction cannot be removed with a brush, use a wooden probe to dislodge the obstruction.
11. Wipe all exterior panels with a cloth dampened with detergent and rinse off any residue with clean warm water.
12. Clean the Control Panel with a damp cloth lightly moistened with a solution of water and a commercial quality foodservice approved detergent.
13. Once the daily cleaning operation is completed, close the drain valve and pour frying medium back into tank.

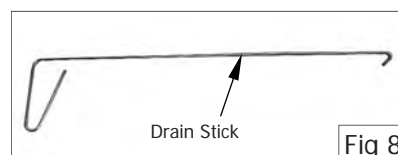


Fig 8

Cleaning and Maintenance

Weekly Cleaning

NOTE: If fryer usage is very high, we recommend that weekly cleaning is carried out more frequently.

1. Proceed to drain and filter the tank as for 'Daily Cleaning'. Do not refill the tank with frying medium until it has been cleaned as shown below.
2. Fill fryer with cold water to the normal fill level and add a high quality commercial cleaner that has been specifically formulated for fryers. *All purpose cleaners are not recommended.*

NOTE: Never use a caustic or lye solution, as this will leave a fat destroying film in the tank.

3. Heat water to approximately 80-90°C.
4. Clean fryer baskets at the same time by immersing them in the cleaning solution. Allow fryer to soak for 5 - 10 minutes or as directed on cleaner instructions. Remove baskets and turn **Off** main burners.
5. Scrub baskets and fryer tank with a stiff nylon bristle brush to remove any remaining deposits. ***DO NOT use a wire brush, as this will scratch the tank sides.***
6. Empty fryer and rinse thoroughly with water. Use a 1 part vinegar to 15 parts water solution to rinse the tank and neutralise any cleaner residue. If this proves unsuitable for cleaner being used, use a weaker solution of up to 1 part vinegar to 25 parts water.
7. Rinse tank thoroughly with water, drain and dry.
8. Refill tank with new filtered frying medium.

Stainless Steel Surfaces

- a. With fryer tank drained, cleaned and dried as shown above, clean exterior surfaces of fryer with hot water, a mild detergent solution and a soft cloth.
- b. Dry all components thoroughly with a dry cloth and polish with a soft dry cloth.
- c. To remove any discoloration, use an approved stainless steel cleaner or stainless steel wool. Always rub in the direction of the grain.

Periodic Maintenance

NOTE: All maintenance operations should only be carried out by a qualified service person.

To achieve the best results, cleaning must be regular and thorough. All controls and mechanical parts should be checked and adjusted periodically by a qualified service person. If any small faults occur, have them attended to promptly. Don't wait until they cause a complete breakdown. It is recommended that the appliance is serviced every 6 months.

Guide to Cooking Problems with Fryer

This section provides an easy reference guide to the more common problems that may occur during operation of your equipment. The fault finding guide in this section is intended to help you correct, or at least accurately diagnose problems with your equipment.

Although this section covers the most common problems reported, you may encounter a problem not covered in this section. In such instances, please contact your local authorised service agent who will make every effort to help you identify and resolve the problem. Please note that the service agent will require the following information:-

- **Model Code and Serial Number of appliance, which can be found on the Rating Plate located on the inside of the access door.**

Fault	Possible Cause	Remedy
Frying Medium Foaming.	Presence of soap or detergent residue from cleaning the tank.	Rinse fryer thoroughly three times with clean water. Ensure fryer is perfectly dry before re-filling with frying medium.
	Excessive breakdown of frying medium.	Add fresh frying medium daily to replace contents every 3-5 days.
	Continual frying of food with excess moisture.	Remove excess moisture from foods to be fried.
	Continued overheating of oil.	Check thermostat setting. Turn down heat to around 120°C (Standby) when use is quiet.
	Overloading.	Maintain 1-8 ratio of food to frying medium.
Gumming.	Heating frying medium too rapidly.	When charging fryer or starting up, melt frying medium gradually.
	Continued overheating of the frying medium.	Check thermostat setting with a thermometer or thermocouple.
	Frying oil broken down.	Check amount of fresh frying medium added to fryer to be sure 'turnover' is adequate.
	Using wrong cooking frying medium.	Some frying mediums form gums when used in a deep fryer. e.g safflower oil.
Greasy Foods.	Frying at too low temperatures.	Increase temperature and check thermostat setting.
	Inadequate preparation of food.	Be sure foods (especially potatoes) are 'cured' correctly.
	Excessive quantities of breading or batter.	Remove surplus breading or batter.
	Placing food in frying medium direct from the freezer.	Allow frozen foods to thaw before frying.
	Surplus moisture in and on surface of food.	Drain and dry foods before frying.
	Frying medium in advanced stages of breakdown.	Discard 'old' frying medium and refill fryer with new frying medium.
	Use of dripping or other unrefined oil.	Due to low smoking point, cooking in these oils at lower temperatures will result in greater oil absorption by the food.
	Using the wrong kind of cooking oil.	Always use a completely refined and deodorised cooking oil.
Rapid Oil Breakdown.	Inadequate frying oil turnover.	Adjust procedures to fry more food in fryer to increase turnover.
	Overheating of oil.	Check thermostat setting with a thermometer or thermocouple.
	Contamination.	Filter or strain the oil daily.
	Poor cleaning procedures.	Clean fryer daily or at least once a week and rinse thoroughly. Dry fryer before use.
	Presence of copper or brass in the fryer equipment.	Remove all copper or brass fittings from contact with the oil.
	Overloading fryer.	Maintain 1-8 ratio of food to frying oil.
	Food excessively moist.	Drain and dry the food before frying.
	Overheating oil on 'Standby' mode.	Reduce temperature of frying oil between 93°C during idle ('Standby') periods.

Fault Finding


Fault	Possible Cause	Remedy
Oil Smoking.	Insufficient turnover of oil.	Maintain a minimum quantity of oil in fryer for more rapid turnover or increase the quantity of food fried in fryer. Replace with fresh oil every 3 to 5 days.
	Continual frying with excess moisture on food.	Drain foods before frying, pat food dry.
	Contamination of oil.	Filter or strain daily to remove contaminants.
	Overheating of oil.	Check thermostat setting with a thermometer or thermocouple.
	Rapid breakdown of oil.	Use a stable frying oil.
	Use of unrefined oils.	Dripping smokes at lower temperature than refined and deodorised oils.
Darkening of Oil.	Presence of salt on the food.	Salt foods after frying and away from the fryer.
	Foods dipped in batter high in egg yolk.	Reduce egg content of batter, replace part egg with milk.
	Contamination of oil.	Filter or strain oil daily to remove contaminants.
	Poor cleaning practice.	Clean fryer at least weekly or each day in cases of heavy usage. Ensure fryer is perfectly dry before use.
	Overheating of oil.	Check thermostat setting with a thermometer or thermocouple.
	Insufficient oil turnover.	Top up daily to replace the contents of fryer in 3 to 5 days.
	Cooking foods with high sugar levels.	At the end of the season, potatoes are usually high in reduced sugars. When fried, they will darken quickly and colour the oil.

NOTE: Excessive oil usage is an indication of high absorption of oil into the food. This is a function of temperature and character of the goods being fried - NOT due to type of oil being used (unless refined oils are being used). Any variation in the apparent life of the oil is always due to one or more of the causes mentioned above.

Fault Finding the Gas System - Fault Finding Table


This guide shows the most likely cause of failure should a fault occur. The information provided should enable quick identification of the most probable faults. Should you have problems that are not covered here, please contact your local authorised service agent who will help you identify and resolve the problem. Please note that the service agent will require the following information:-

- **Model Code and Serial Number of appliance. (found on Rating Plate on rear of access door).**

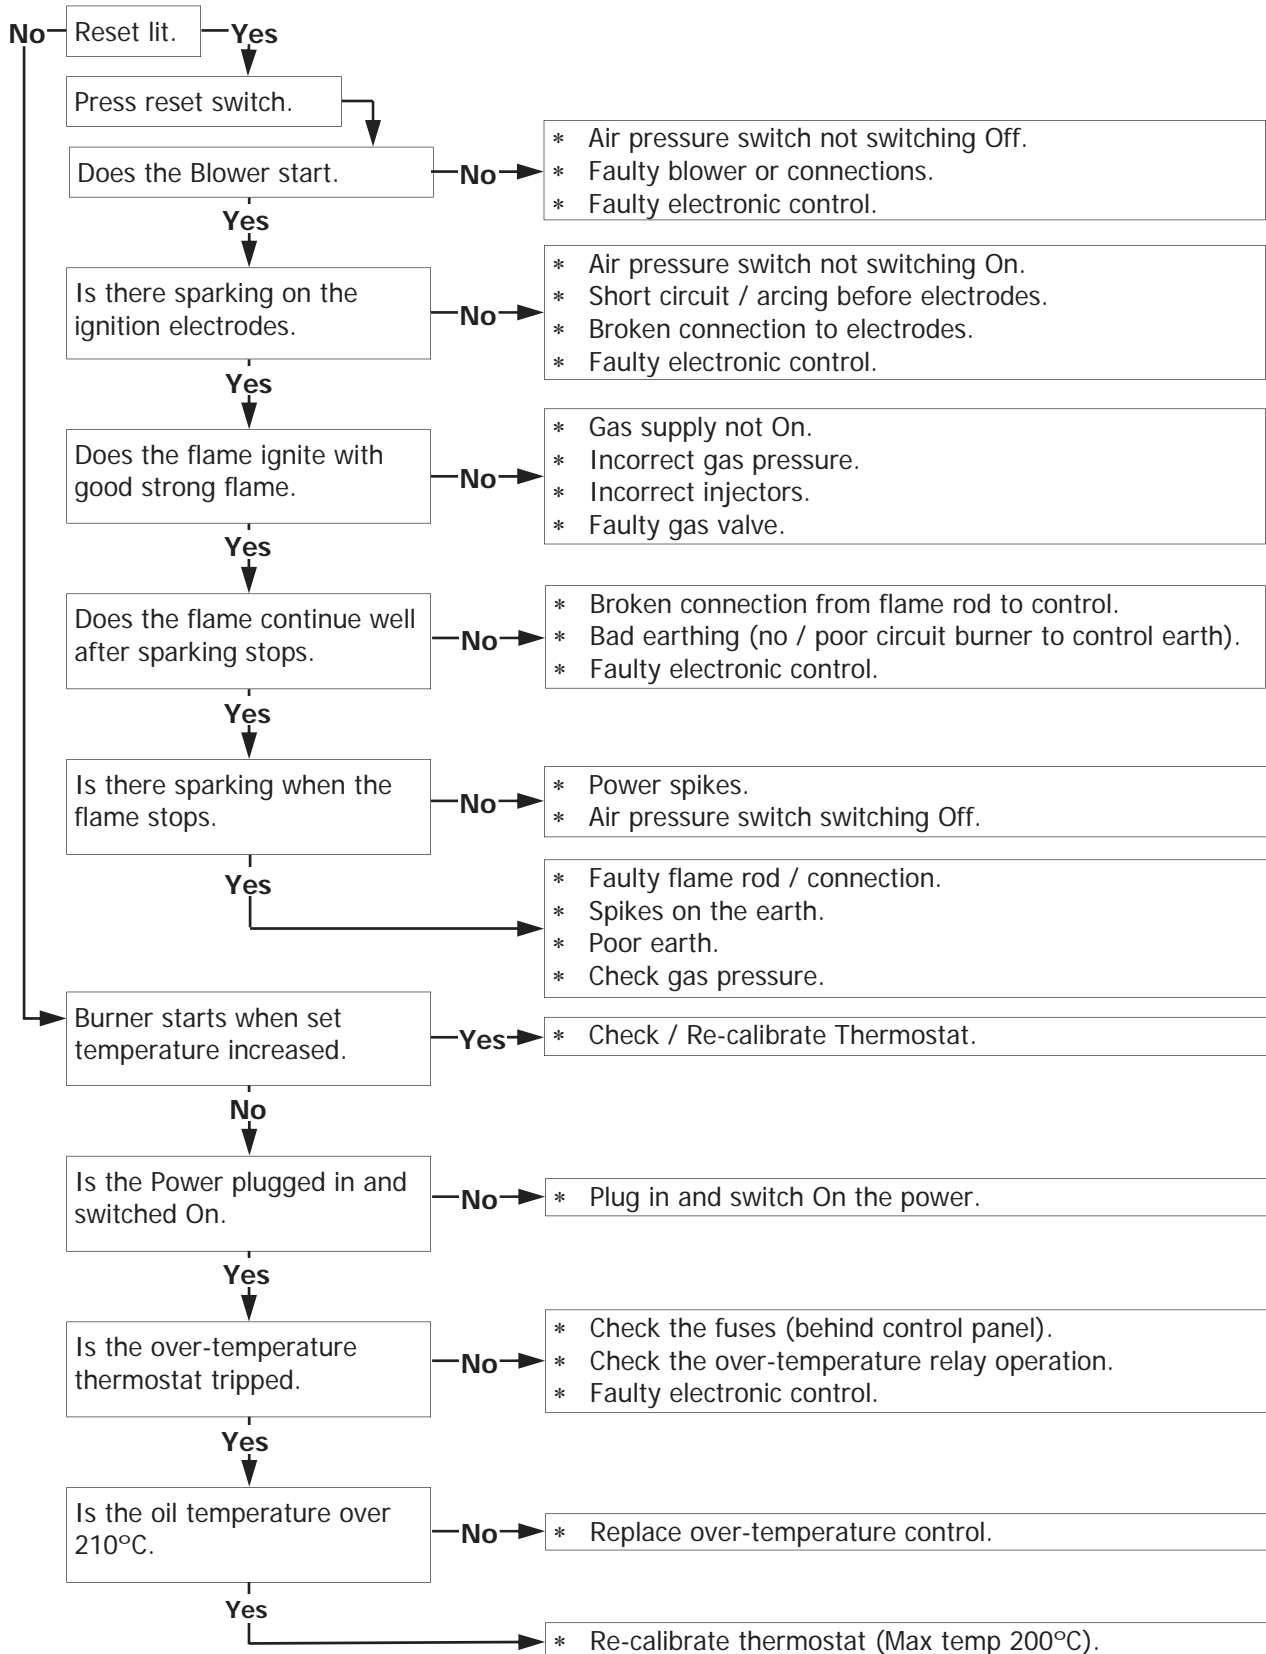

Circuit Wiring Schematic

Circuit Wiring Schematic

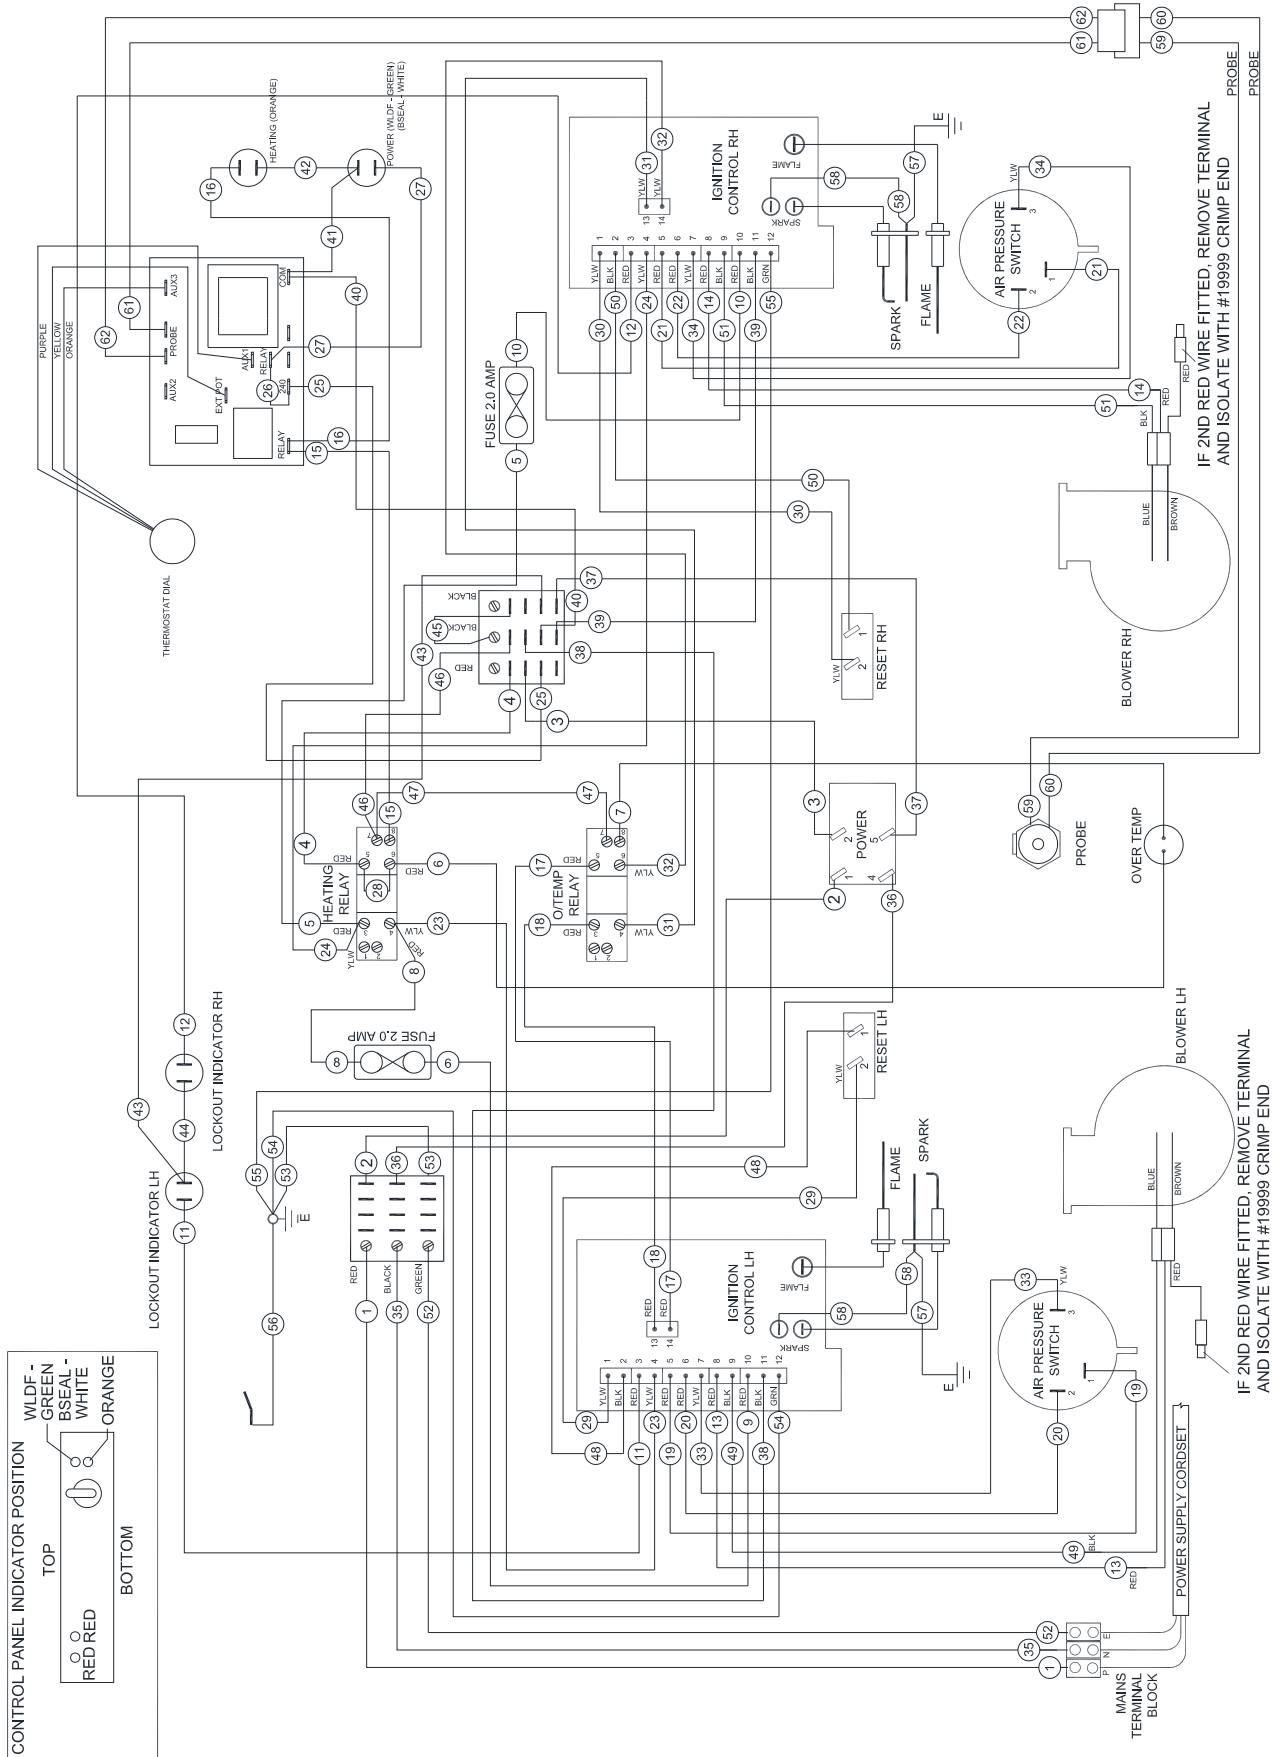

Conversion Procedure



Caution


Ensure Appliance is isolated from the gas supply before commencing servicing.

NOTE:


- These conversions should only be carried out by qualified persons. All connections must be checked for leaks before re-commissioning the appliance.
- For all relevant gas specifications refer to the table at the rear of this section.

Main Burner Injectors

1. Unscrew the injector gas supply tube fitted into the blower / burner air manifold and air manifold connection.
2. Remove main burner injector connector and injector and replace with correct size injector as shown in 'Gas Specifications Table' at the end of this section.
3. Reconnect the injector gas supply tube.

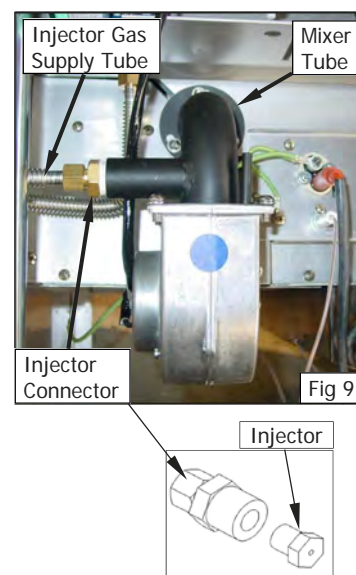


4. Remove 3 screws securing aeration plates to side of blower motors and replace with correct plates. Refer to 'Gas Specifications Table' at end of this section.

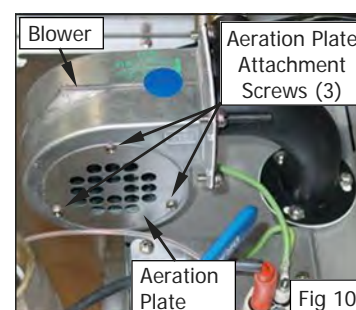

Main Burner Operating Pressure Adjustment

1. Connect a manometer to the lower test point (Operating Pressure Test Point) on the gas control valve. (Refer to Fig 11).
2. Remove the slotted cap to reveal the Pressure Adjusting Screw.
3. Turn 'On' the gas and power supply and light the main burners.
4. Adjust the regulator Pressure Adjusting Screw to obtain the correct burner pressure for type of gas being used. Refer to the 'Gas Specifications Table' at the rear of this section.
5. Refit the slotted cap to the screw adjustment point.

NOTE: Each burner has a separate gas valve / regulator and each must be individually adjusted and set.

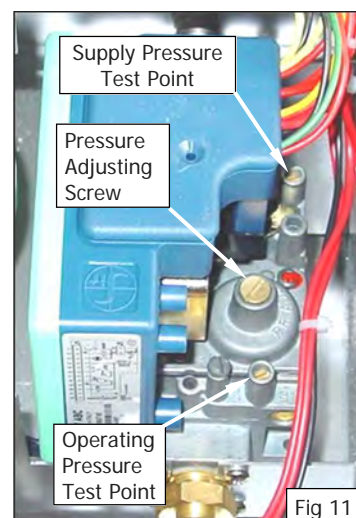

Gas Conversion and Specifications

Gas Type Identification Label

On completion of the gas conversion, replace the gas type identification label located at:-

- The rear of the appliance, above the gas connection point.
- Beside the rating plate.

Commissioning



Before leaving the converted installation;

1. Check all gas connections for leakage using soapy water or other gas detecting equipment.
2. Check the following functions in accordance with the operating instructions shown in the 'Operation' section of this manual.
 - Light the Main Burners.
 - Check the Thermostat operation.
 - Ensure that all the controls operate correctly.



NOTE: If it is not possible to get the unit to operate correctly, shut 'Off' the gas and power supply and contact the supplier of this unit.

Gas Specifications




- Australia:

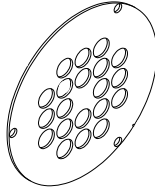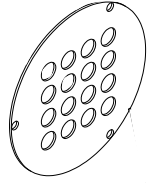	Natural Gas	LP Gas (Propane)
Main Burner Injectors	4.30mm	2.40mm
Aeration Plate	 20 x Ø 9.55 holes	 16 x Ø 9.55 holes
Operating Pressure	0.87 kPa (*)	2.55 kPa (*)
Supply Pressure	1.13 - 3.40 kPa	2.75 - 3.40 kPa

- New Zealand:

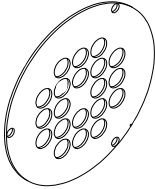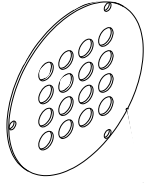	Natural Gas	LP Gas
Main Burner Injectors	4.30mm	2.40mm
Aeration Plate	 20 x Ø 9.55 holes	 16 x Ø 9.55 holes
Operating Pressure	0.87 kPa (*)	2.55 kPa (*)
Supply Pressure	1.13 - 3.40 kPa	2.75 - 3.40 kPa

- All Other Markets:

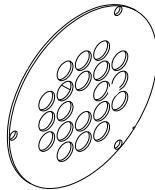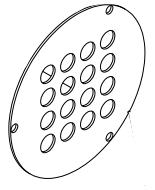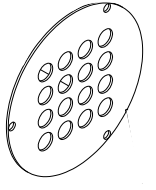	Natural Gas	LP Gas (Propane)	Butane
Main Burner Injectors	4.30mm	2.40mm	
Aeration Plate	 20 x Ø 9.55 holes	 16 x Ø 9.55 holes	 16 x Ø 9.55 holes
Operating Pressure	0.87 kPa (*)	2.55 kPa (*)	2.30 kPa (*)
Supply Pressure	1.13 - 3.40 kPa	2.75 - 3.40 kPa	2.75 - 3.40 kPa

NOTE:

- (*) Measure burner operating pressure at Operating Pressure Test Point (Lower - Out) on gas control valve with both burners operating at the 'High Flame' setting. Refer to 'Gas Conversion and Specification' Section for further details.

NAT, LPG & Butane Only - Operating pressure is ex-factory set and is not to be adjusted, unless when converting between gases, if required.

Refer to the information in this section for further details.

Replacement Parts List

Replacement Parts List

IMPORTANT:

Only genuine authorized replacement parts should be used for the servicing and repair of this appliance. Instructions supplied with the parts should be followed when replacing components.

For further information and servicing instructions, contact your nearest authorized service branch (contact details are as shown on reverse of front cover of this manual).

When ordering replacement parts, please quote the part number and description as listed below. If the part required is not listed, request the part by description and quote model number and serial number which is shown on the rating plate.

Controls

022594	Gas Control Valve SIT 840.
023163K	Burner Kit.
235356	Thermostat Knob Blue Seal 6mm - 195-100°C.
229685	Temperature Control PC Board.
234151	Potentiometer.
020117	Temperature Probe Assembly.
018022K	Over-Temperature Thermostat.
234140	Electronic Ignition / Valve Control Module.
022596	Air Pressure Switch.
023160K	Burner Blower Kit.
024792	Ignition Electrode Spark.
025383	Ignition Electrode Flame.
020109	Fuse 2 Amp.
227963	Reset Indicator (Amber).
228922	Power Indicator (White).
013528	Heating Indicator (Red).
022449	Power (ON / OFF) Switch.
020258	Reset Switch.
016674	Relay Over-Temp Switching.
016674	Relay Heating Circuit.
016673	Relay Base.

General

023220	Basket.
228578	Basket Tray.
228128	Fish Plate.
227856	Door Magnet.
018358	Drain Valve.
227850	Adjustable Leg (150mm) (Flush Stud).
229674	Rear Roller Assy.
018147	Drain Extension.
018176	Drain Stick.
228898	Splash Guard (Left Hand).
228899	Splash Guard (Right Hand).
228575	Lid Assembly.

Gas Conversion Kits

Models	Gas Type to Convert to	
	Nat. Gas (G20)	LPG (Propane) (G31)
All Models	022696	022695

Accessories

228794 600mm (Fryer) Plinth Kit.

